

Digital tachograph – DTCO[®] 3.0 ... 3.0b

EN Instruction manual for contractors and drivers



VDO

Dear user,

The **DTCO 1381** digital tachograph, with its system components, is an EC recording device that complies with the technical specifications according to the EC regulation (EEC) no. 3821/85 annex I B, (as amended).

The prepared data helps ...

- the driver obey the law when driving
- and gives the company useful data about the performance of the driver and the vehicle (special software required).



These operating instructions were written for the **company** and the **drivers** and describe proper handling of the DTCO 1381 Release 3.0 – 3.0b as specified by the regulations. Carefully read these instructions and become familiar with the DTCO 1381.

Further information on the DTCO 1381 as well as contact addresses are available on the Internet at: **www.fleet.vdo.com**

We wish you happy motoring.

Your friends at AUMOVIO Germany GmbH

© 2026 by AUMOVIO Germany GmbH

Responsible for content:

AUMOVIO Germany GmbH

P.O. Box 1640

78006 Villingen-Schwenningen GERMANY

We reserve the right to make changes to technical details in the descriptions, specifications, and figures contained in these operating instructions. Reprinting, translations, and reproductions are not permitted without written approval.

Release overview	6	Display of messages	20	Operational mode	4
General instructions	1	Production status	20	Inserting driver card(s)	32
Means of depiction	8	Out of scope	20	Manual entries	32
Handling the DTCO 1381	9	Ferry transfer or train transfer	21	Correction possibilities	34
Legal requirements	10	Behaviour during low voltage / overvoltage	21	Country entry during manual entry...	35
Obligations of the driver	10	Power interruption	21	Aborting the entry procedure	35
Obligations of the company	11	Communication error.....	22	Add "Rest period" activity	36
Handling of the printouts	11	Front interface	23	Continuing the work shift	37
Handling the tachograph cards	12	Tachograph settings.....	23	Continuing the work shift and prefixing activities to a work shift	38
Cleaning tachograph card	12	DTCO 1381 Remote control.....	23	Setting activities	39
Introduction	2	Entry of the official registration number	23	Manual setting	39
Display and operational elements ..	14	"Company" mode	3	Automatic setting	39
Brief description.....	15	Functions of the company card	26	Automatic setting after ignition on/off *	39
First operating steps	17	Menu functions in the "company" mode	26	Handwritten activity entries	40
For the company	17	Company card insertion	27	Downloading driver card data.....	41
For the driver	17	Enter vehicle registration number ...	28	Withdrawing driver card(s)	42
Display variations	18	Prepare data download	29	Menu guidance after withdrawing driver card	43
Standby mode	18	Company card withdrawal	30	Driver / vehicle change during operation	44
VDO GeoLoc *	18			Documents to be kept while driving	45
Display after ignition on/off	18				
Standard display(s)	19				
Data display when the vehicle is stationary	20				


Table of contents


Printer Handling	5	Overview of the menu structure	59	Setting the company local time	68
Insert paper roll	48	Navigating in the menu functions ..	60	Make UTC correction	68
Printout of data	49	Menu access blocked!	61	Switching on/off the vehicle	
Start printout	49	Leaving menu functions	61	recording	69
Cancel printout	49	Main menu printout driver 1 /		Activating additional functions	69
Things to note when printing	50	driver 2	62	Main menu display driver 1 /	
Clear paper jam	50	Print daily value	62	driver 2	70
Menu functions	6	Print events	62	Main menu display vehicle	71
Calling up menu functions	52	Print activities	62	Messages	7
When the vehicle is stationary	52	Main menu, vehicle printout	63	A message appears	74
Change of activities	52	Print daily value from the data		Characteristics of the messages	74
Display at start of drive	52	memory	63	Acknowledgement of messages	75
Displaying the times of the driver		Print events from the data memory ..	63	Overview of the events	76
card	53	Print instances of over-speeding	63	Overview of the faults	78
Setting the language	53	Print technical data	63	Driving time warnings	80
VDO Counter *	54	Print v-diagram	64	VDO Counter * display	80
Layout of the VDO Counter display ..	54	Print D1/D2 status *	64	Overview of the operational	
Displays during trip	55	Print speed profiles *	64	notes	81
Display for activity "Break time"	56	Print rpm profiles *	64	Product description	8
Display for activity "Working time" ...	56	Main menu entry driver 1 /		Operating modes of the	
Display daily values	57	driver 2	65	DTCO 1381	88
Display weekly values	57	Enter Begin country	65		
Status display	57	Enter End country	65		
		Activating the remote control	66		
		Main menu entry vehicle	67		
		Enter Out beginning / end	67		
		Enter Beginning of ferry / train	67		
		Set Local time	68		


Tachograph cards	89	Pictograms and printout samples	9	Data record purpose during events or faults	115
Driver card	89	Overview of the pictograms	96	Coding of data record purpose	115
Company card	89	Pictogram combinations.....	97	Coding for more detailed description	117
Control card	89	Country symbols	99		
Workshop card	89	Symbols of the regions.....	100		
Locking the tachograph cards	89	Printout examples	101		
Access rights of the tachograph cards	90	Daily printout from the driver card	101		
Saved data	91	Events / faults from the driver card	102		
Driver card	91	Daily printout of the vehicle	103		
Company card	91	Events / faults from the vehicle	104		
Data memory	91	Over-speeding.....	105		
VDO GeoLoc *	91	Technical data	105		
Time management	92	Driver's activities	106		
Converting to UTC time	92	v-diagram	106		
Care and maintenance	93	Status D1/D2 diagram *	106		
Cleaning the DTCO 1381	93	Speed profiles *	107		
Compulsory Tachograph inspections	93	Rpm profiles *	107		
Behaviour when repairing / replacing the DTCO 1381	93	Printout in local time	107		
Disposal of the components	93	Explanations of printout examples	108		
Technical data	94	Legend of the data blocks	108		
DTCO 1381	94				
Paper roll	94				
				Appendix	A
				Keyword directory	119
				Automatic setting of the activities after ignition on/off	122
				Accessories	123
				DLKPro Download Key	123
				DLKPro TIS-Compact	123
				Remote DL 4G	123
				Cleaning cards and cleaning cloths	123
				VDO Online Shop	123
				Declarations of conformity / Authorisations	124

■ Release overview

The present certified operating instructions are valid for the following DTCO 1381 device versions:

Release version (can be seen on the model plate)	Certified operating instructions	Special operational features
 <p>Rel. 3.0a/b</p>	BA00.1381.30 100 102	<p>Current operating instructions</p> <ul style="list-style-type: none">• New process when inserting and removing a Company Card; ➔ see page 27.• Entry of the Vehicle Registration Number and of the Country of registration using a Company Card; ➔ see page 28.• New process when inserting and removing a Driver Card; ➔ see page 32.• New printer operation; ➔ see page 47.• Activating the remote control; ➔ see page 66.• Use of a licence code to activate additional functions. ➔ see page 69.

 These operating instructions do not apply for earlier device release versions!

 The product and manuals still contain references to the manufacturer's previous name, 'Continental Automotive Technologies GmbH'. This does not constitute grounds for complaint, as the renaming of the manufacturer to 'AUMOVIO Germany GmbH' is a transition involving the transfer of all rights and obligations of the manufacturer.

General instructions

Means of depiction

Handling the DTCO 1381

Legal requirements

Handling the tachograph cards

1

■ Means of depiction

You will find the following emphases in these operating instructions:



Warning message

A warning message points out possible risks of injury or accidents.



Attention!

The text beside or below this symbol contains important information to avoid loss of data, to prevent damage to the device, and to comply with legal requirements.



Hint

This sign will give you some advice or information which, when not observed, could lead to malfunctions.



The book means a reference to another documentation.


Steps

1. The numbered steps describe actions – You must do something. For example you will be guided through the menu step by step and asked to make an entry.
2. Further actions are numbered consecutively.

Symbols

- * The asterisk marks a special feature / option.
Note: Observe the instructions for the **ADR variant** * "☺" and the option "**Automatic adjustment of the activities after ignition on/off**" *, as individual functions depend on the ignition. The **VDO Counter** * supports your daily, weekly planning when "on the road".
- ➡ This sign shows the page on which you will find further information about the topic.
- ↔ This sign indicates that the topic will be continued on the next page.

Menu representation

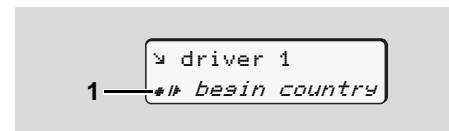

Flashing lines or characters in the menu display are shown in *italics* (**1**) in these operating instructions.

Definitions

- Driver 1** = Crewmember who is driving the vehicle at the moment or will be driving the vehicle.
- Driver 2** = Crewmember who is not driving the vehicle.

■ Handling the DTCO 1381



Risk of Accident

While driving, messages can appear in the display. It is also possible that the driver card will be automatically ejected.

Do not be distracted by this; instead, continue to focus all of your attention on driving safely.



Danger of injury

You and other persons might be injured by an open card tray.

Open the card tray only for inserting a tachograph card.



Danger of injury

Depending on the volume of information printed, the thermal printing head may be very hot! Wait until the printing head has cooled before you insert a new roll of paper.



Danger of explosion

The DTCO 1381 ADR version * is designed for use in explosion-risk environments.

Please observe the instructions for transport and handling of hazardous materials in explosion-risk environments.



Observe the following instructions in order to avoid damage to the DTCO 1381!

- Authorised persons are responsible for installing and sealing the DTCO 1381. **Do not carry out any repairs of the device or the supply lines.**
- Do not insert any other cards, such as credit cards, cards with relief printing, or metallic cards, etc. into the card slot. These type of cards will damage the card slot of the DTCO 1381!



DTCO 1381 connection cables and casing seal must not be damaged or removed. The DTCO 1381 may otherwise be in a non legal state with data no longer reliable.

- Only use type-approved paper rolls recommended by the manufacturer (original VDO printer paper). Make sure that it contains the approval mark.
➔ *Details refer to "Paper roll" on page 94.*
- Do not activate the button elements with sharp-edged or pointed objects such as a ballpoint pen, etc.
- Clean the unit with a slightly moist towel or with a microfibre cleaning cloth. (Available from your sales and service center.)
➔ *Refer to "Care and maintenance" on page 93.*

■ Legal requirements



Any person who makes any changes to tachographs or the signal feed in a way that influences the recording and memory of the tachographs, especially if done with fraudulent intentions, may violate laws or provisions.

The falsification, suppression, or destruction of tachograph recordings, the tachograph cards, and the printed documents is forbidden.

Legal Foundation

The use of digital tachographs is regulated in the Regulation (EU) No 165/2014 in combination with Regulation (EC) No 561/2006 and the relevant national laws. They require the driver and the operator of the vehicle (company) to conform to a number of obligations and responsibilities. The following list is not guaranteed to be complete or legally valid.

▶ Obligations of the driver

- The driver must take care that the driver card and the tachograph will be used properly.
- Behaviour in the event of malfunctions of the tachograph:
 - The driver must note information about the activities which are no longer properly recorded or printed by the tachograph on a separate sheet or on the rear side of the paper roll!
 - Refer to “Handwritten activity entries” on page 40.
 - If away from base, for more than 1 week, the driver must ensure that the tachograph is repaired by an authorised workshop en route.
- During mixed tachograph operation (use of vehicles with analogue [chart based] and digital tachograph), the necessary documents must be carried.
 - Refer to “Driver / vehicle change during operation” on page 44.
- If the driver card is lost, stolen, damaged, or malfunctions, then the driver must at the beginning and at the end of the journey generate a daily printout from the DTCO 1381 and add his personal information. If necessary, availability periods and other working times must be inserted by handwritten entries.
 - Refer to “Handwritten activity entries” on page 40.
- If the driver card is damaged or fails to operate properly, it must be sent back to the authorised authority, or its loss must be duly notified. The replacement card must be applied for within seven calendar days.
- If the driver card is lost, stolen, damaged or malfunctions, a journey may be continued without driver card for a period of 15 calendar days or longer if necessary for the vehicle to return to the company location.



- Inform the authorised authority immediately about the exact reasons for the renewal, replacement, or exchange of the driver card by another member state authority.
 - After the end of validity, the driver must continue to carry the driver card for at least 28 calendar days (Driving Personnel Decree in Germany).
- **Obligations of the company**
- Take care that, when a new vehicle is delivered, an authorised workshop immediately completes the calibration data with authorised member state and vehicle registration number.
 - When inserting in the company card, you are requested, if necessary, to enter the member state and the vehicle registration number of the vehicle in the DTCO 1381.
↳ *Refer to “Enter vehicle registration number” on page 28.*
 - Lock the company in the DTCO 1381 at the beginning of the vehicle deployment, and lock it out again at the end.
↳ *Details refer to “Company card insertion” on page 27.*
- Make sure that enough authorised rolls of paper are available in the vehicle.
 - Monitor the proper function of the tachograph. Observe the intervals which, according to the legal stipulations, are prescribed for the inspection of the tachograph. (Periodic (calibration) test at least every two years.)
 - Download the data from the data memory of the DTCO 1381 and from the driver cards at regular intervals and store the data according to the legal stipulations.
 - Have repair and calibration work done by authorised workshops only.
↳ *Details refer to “Compulsory Tachograph inspections” on page 93.*
 - Supervise the proper use of the tachograph by the drivers. Check driving times and rest periods periodically and compare these with the legal requirements.
- **Handling of the printouts**
- Take care that the printouts will not be damaged by strong light, sunlight, moisture, or heat (making them illegible).
 - The holder of the vehicle / the company must retain the legal printouts for at least 1 year. (2 years for Working Time Directive Regulations.)

1

■ Handling the tachograph cards

Possession of a tachograph card authorises the holder to use the DTCO 1381. Areas of activity and access rights are prescribed by law.

➔ Refer to “Tachograph cards” on page 89.



The driver card is person-specific. The driver uses this card to identify himself to the DTCO 1381.

The driver card is not transferable!



The company card is designed for owners and operators of vehicles with installed digital tachograph and must not be transferred to "Others".

The company card must not be used for driving!



Handle your tachograph card carefully in order to avoid loss of data and observe the instructions of the issuing authorities for tachograph cards.

- Do not bend or fold the tachograph card and do not use them for anything other than their intended purpose.
- Do not use damaged tachograph cards.
- Keep all contact surfaces clean, dry, and free of grease and oil (always use a protective cover).
- Protect the card from direct sunlight (do not allow it to lie on the instrument panel).
- Do not place it in direct proximity to strong electromagnetic fields.
- Do not use the card beyond its period of validity. Apply for a new tachograph card in a timely manner before expiry.

► Cleaning tachograph card

Clean dirty contacts of the tachograph card with a slightly moistened cloth or with a microfibre cleaning cloth. (Available from your sales and service center.)



Do not use any solvents like thinner or petroleum spirits to clean the contacts of a tachograph card.

Introduction

Display and operational elements


First operating steps

Display variations

Front interface

■ Display and operational elements

2

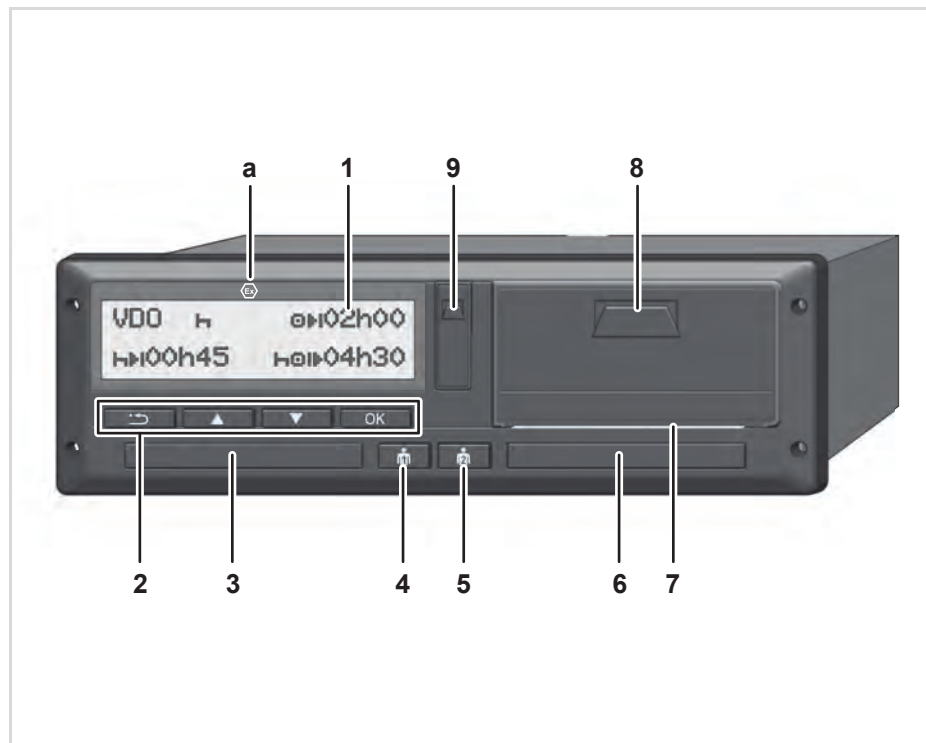

- (1) Display
- (2) Menu buttons
- (3) Card slot 1
- (4) Driver 1 combination button
- (5) Driver 2 combination button
- (6) Card slot 2
- (7) Cutting edge
- (8) Printer drawer
- (9) Download interface

(a) Symbol "Ⓔ" for ADR variant *
 (ADR = European Agreement concerning the international carriage of dangerous goods by road)

The DTCO 1381 can be remotely controlled by the corresponding accessories.

Caution!


The card tray covers should not be removed in order to prevent dust and dirt penetration or water ingress!


Always keep the card trays closed.

► Brief description

Display (1)

All DTCO 3.X are equipped with a negative display.

 For improved legibility, the displays in this manual are displayed in the inverse (positive view).



 Except for the standby mode, the display cannot be completely switched off. It is only dimmed to a minimum value.


Depending on the vehicle's operational condition, different displays will appear or data can be displayed.


➔ Refer to “Display variations” on page 18.

Menu buttons (2)

Use the following buttons to enter, display, or print out data:

 /  Use the paging function to select the desired function or selection. (This is possible by pressing and holding down the auto-repeat function key.)


 Confirm or acknowledge desired function / selection.

 Back to the last entry field, abort the entry of a country, or leave the menu one step at a time.

Card slot 1 (3)


Driver 1, who will drive the vehicle at this moment in time, inserts his driver card into slot 1.

➔ For more details, see “Inserting driver card(s)” from page 32.

 The card tray covers can be replaced if they are defective.

Contact your service partner.


Driver 1 combination button (4)

 Activity and ejection button for driver 1:

Press the button for a short time: The activity is changed
➔ *Details refer to “Setting activities” on page 39.*

Keep the key pressed (at least 2 sec.): The card shaft is opened to insert or withdraw a tachograph card.

Driver 2 combination button (5)

 Activity and ejection button for driver 2:

Press the button for a short time: The activity is changed
➔ *Details refer to “Setting activities” on page 39.*

Keep the key pressed (at least 2 sec.): The card tray will then open to insert or withdraw a tachograph card.

Card slot 2 (6)


Driver 2, who is not driving the vehicle at this moment in time, inserts his driver card into slot 2 (crew operation).

Cutting edge (7)

You can use the cutting edge to tear off a printout generated by the integrated printer.

Printer drawer (8)

Printer drawer for inserting a roll of paper.

 The printer drawer can be replaced if it is defective. Contact your service partner.

Download interface (9)

The download interface is located under the cover. The access rights of this interface are regulated according to the inserted tachograph card.

➔ *Details refer to "Access rights of the tachograph cards" on page 90.*

ADR variant * (a)



When loading and unloading hazardous materials

- The cap of the download interface on the DTCO 1381 must be closed
- No buttons on the tachograph must be pressed
- No workshop, control or company card must be inserted.




In the case of ADR variants, switch on the ignition (if required) to be able to use the printer, card, trays and display operating modules without restrictions.

■ First operating steps

► For the company

1. Register your company within the DTCO 1381. Insert the company card into any card slot.
 ➔ *Details refer to "Company card insertion" on page 27.*

 The company card must not be used for driving!

2. Withdraw the company card at the end of the registration or the download of data from the card slot.
 ➔ *Details refer to "Company card withdrawal" on page 30.*

► For the driver

1. Insert your driver card into the card slot at the beginning of the shift (start of working day).
 ➔ *For more details, see "Inserting driver card(s)" from page 32.*
2. Using the "Manual entry" you can add activities on your driver card.
 ➔ *For more details, see "Manual entries" from page 32.*

3. Use the activity button to adjust the activity you want to carry out at that moment.
 ➔ *Details refer to "Setting activities" on page 39.*
4. Adjust the time to the current local time.
 ➔ *Details refer to "Set Local time" on page 68.*

The DTCO 1381 is ready for operation!

5. **Important!** During a rest period or break time, always set the activity to "H".
6. Possible faults in the device or the system components will appear in the display. Acknowledge the message.
 ➔ *For more details, see "A message appears" from page 74.*
7. At the end of the shift (end of the working day) or vehicle change, you request your driver card from the card slot.
 ➔ *For more details, see "Withdrawing driver card(s)" from page 42.*

8. You can display or print activities from preceding days as well as saved events, etc. by means of the menu functions.
 ➔ *For more details, see "Calling up menu functions" from page 52.*



These operating instructions do not contain the legal requirements which are valid in the respective countries. If necessary, they must be complied with, too.

■ Display variations

General Information

The display consists of pictograms and text with the language being automatically set as follows:

- The language will be determined by the driver card that is currently inserted in card slot 1 and / or the driver card that was most recently inserted in the DTCO 1381.
- Or the tachograph card with a higher value, such as the company card, control card.

Select language

As an alternative to the automatic language setting, you can individually set a preferred language.


➔ *Details refer to "Setting the language" on page 53.*

▶ Standby mode


In the Operational "O" mode, the DTCO 1381 will switch into standby mode after about 1 minute:

- the vehicle's ignition is off,


- and no message is pending.

 After ignition off, the display is dimmed to a predefined value. The display disappears after another minute (customer-specific value). Optionally an additional dimming value can be set following ignition off for easier operation of the device. If the DTCO 1381 is activated from stand-by mode by the pressing of a button, the display lighting is reactivated in standby mode. The pressing of this button acts solely to reactivate the display and does not result in any further action.

Upon exiting standby mode, the DTCO 1381 switches to the last selected standard display when the vehicle became stationary.

 If the configured value of the dimming for an ADR variant is selected too high, it will be automatically reduced.


▶ VDO GeoLoc *

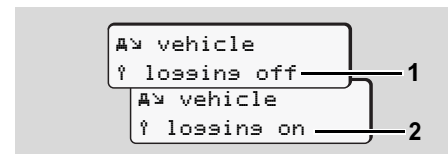

VDO GeoLoc

You have the option of switching the recording of the position and vehicle data to on (2) or off (1). ➔ *Refer to "Switching on/off the vehicle recording" on page 69.*

▶ Display after ignition on/off

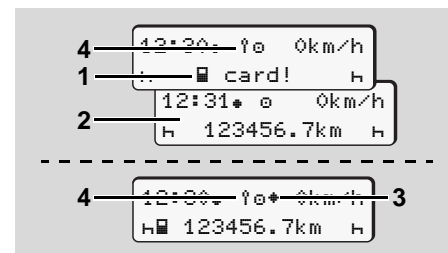

Display after ignition on/off




Ignition on: If there is no tachograph card in card slot 1, this note (1) will appear for approximately 20 seconds and then the standard display (2) will appear.

Symbol (4) flashes for approx. 5 seconds after the driver card is inserted. This means that the recording of position data via the 'logging on' menu option is switched on.

Ignition off: Symbol (3) indicates that the IMS function is available.
(IMS = Independent Motion Signal)

Symbol (4) indicates that the VDO GeoLoc function is switched on.

► Standard display(s)

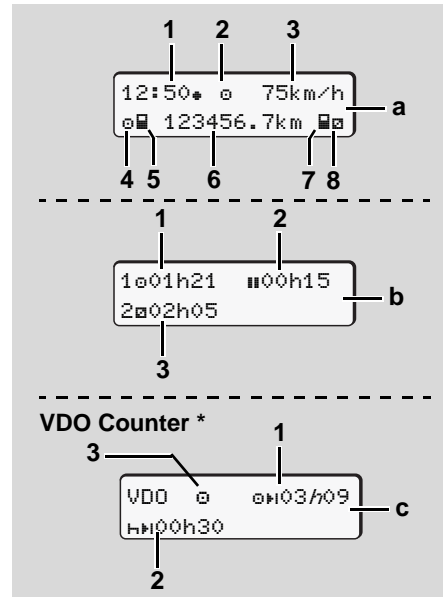

Standard displays during trip

As soon as the vehicle starts moving and no message is displayed, the previously set standard display appears automatically.


By pressing any menu key, you can also switch over to the standard display (a), (b) or (c).

Standard display (a):

- (1) Time
with symbol "*" = Local time
without symbol "*" = UTC time
- (2) Symbol of the operating mode
"Operational"
- (3) Speed
- (4) Activity, driver 1
- (5) Card symbol, driver 1
- (6) Total odometer
- (7) Card symbol, driver 2
- (8) Activity, driver 2

Standard display (b):

- (1) Driving time "e" of Driver 1 since a valid break time.
- (2) Valid break time "H" in cumulative break periods of at least 15 minutes followed by 30 minutes, in accordance with regulation (EU) no. 561/2006.
- (3) Times of driver 2:
Current activity availability time "e" and duration of activity.

 If the driver card is missing, times which are assigned to the respective card slot "1" or "2" will appear.

Option: VDO Counter * (c)

- (1) Remaining driving time "0:00" ("h" flashes = this part of the display is currently active).
- (2) Next valid break time / daily or weekly rest period "h:m".
 ➔ For more details, see "VDO Counter *" from page 54.
- (3) The current activity is shown.

► Data display when the vehicle is stationary

When the vehicle is not moving and driver card is inserted, you can call up other data of the driver card.


➔ Refer to "Calling up menu functions" on page 52.

► Display of messages

Regardless of which display currently appears or whether the vehicle is moving or stationary, messages will be displayed with priority.

➔ Refer to "A message appears" on page 74.

► Production status

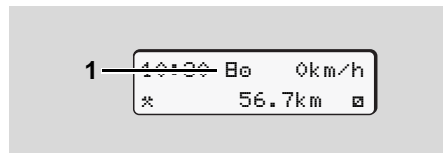


Display of production status

If the DTCO 1381 has not yet been activated as a recording device, then "Production status", symbol "P" (1) will appear. The DTCO 1381 will not accept any tachograph cards except the workshop card.



Please make sure that the DTCO 1381 is immediately and properly brought into operation by an authorised workshop.

► Out of scope

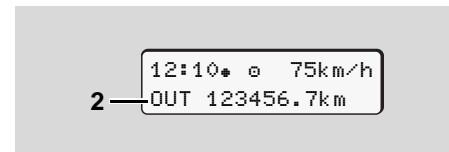

Standard display (a): Out of Scope display

The vehicle is driving outside the scope of the regulations, symbol "OUT" (2).

You can set this function through the menu.


➔ Refer to "Enter Out beginning / end" on page 67.

The following journeys may be outside of the scope of application:

- Journeys on non-public roads.
- Journeys outside of AETR countries.
- Journeys where the vehicle does not require use of the DTCO 1381 in accordance with the regulations.

By pressing any menu key, you can switch over to the standard display (b) or (c) *,
 ➔ see page 19.

► Ferry transfer or train transfer

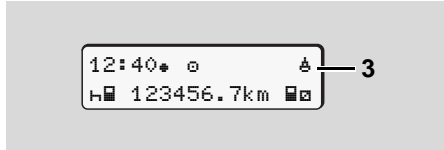

Standard display (a): Display of ferry transfer or train transfer

The vehicle is located on a ferry or on a train, symbol "♣" (3).

You can set this function through the menu.

➔ Refer to "Enter Beginning of ferry / train" on page 67.


☞ Please ensure that this function and its current activity are set during the transport.

By pressing any menu key, you can switch over to the standard display (b) or (c)*,

➔ see page 19.

► Behaviour during low voltage / overvoltage

☞ Do not insert a tachograph card if a card tray is open during over voltage or low voltage.

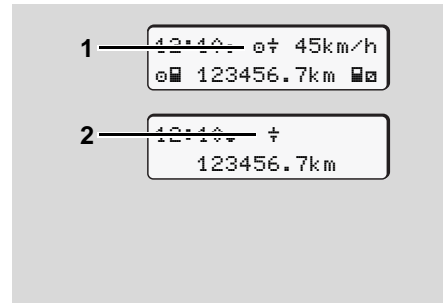

Standard display (a): Fault in the supply voltage
If the supply voltage of the DTCO 1381 is too low or too high, an indication is shown in the standard display (a) as follows.

Case 1: "⚡" (1) Low voltage


☞ In case of over voltage, the display is switched off and the buttons are locked.

The DTCO 1381 continues to save activities. The functions printing or display of data and the insertion or withdrawal of a tachograph card are not possible!

Case 2: "⚡" (2)

This case corresponds to a power interruption. The standard display (a) appears automatically. The DTCO 1381 cannot fulfill its role as a recording device! The driver's activities will not be recorded.

► Power interruption

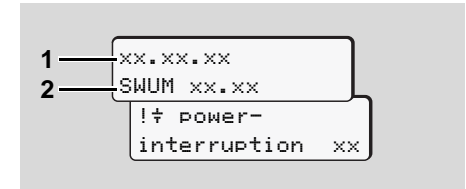

Display of the "Power interruption" message
As soon as the voltage is present again, the version of the user software (1) and the version of the software upgrade module (2) will appear for approximately 5 seconds.

Then the DTCO 1381 indicates "Power interruption".




If, with correct on-board voltage, the symbol "⚡" is displayed permanently, please contact an authorised workshop.

When the DTCO 1381 is defective, you are obligated to note activities with handwritten entries.

➔ Refer to "Handwritten activity entries" on page 40.

► Communication error

If an error has occurred due to a card communication error with the DTCO 1381, the driver is requested to remove his card.



Please eject
the card xx

While the card is ejected, a new attempt is made to communicate with the card. If this attempt fails too, a printout of the activities last saved for this card, starts automatically.



With this printout, the driver is able to document his mode activities.

The printout must be signed by the driver.

The driver can then add manually all mode activities (except for driving times) to the printout up until the driver card is inserted again.



The driver can also make a daily vehicle unit printout and enter his additional activities up to the next insertion of the card and sign it.



In the case of longer duration from the vehicle – e.g. during a daily or weekly rest period – the driver card should be removed from the card slot.

■ Front interface

▶ Tachograph settings

The driver or the company (with company card) can use the front interface to make various settings. This includes, for example:

- Entry of the vehicle registration number and of the country of registration
- VDO Counter display
- Remote control Activity changes when the ignition is switched on or off
- D1/D2 status detection
- Printout logo
- Download reminders
- Recording of road speed and RPM profiles
- Pre- overspeed warning

▶ DTCO 1381 Remote control

The DTCO 1381 can be remotely controlled by means of a DTCO SmartLink in combination with an APP on a bluetooth device or on test equipment.

The driver can activate the remote control on the DTCO 1381 and use a code to connect the tachograph to a mobile device. (i.e. Smartphone)

➡ *Details refer to “Activating the remote control” on page 66.*

▶ Entry of the official registration number

The Entry of the vehicle registration number and the country of registration can also be entered via an APP in combination with the DTCO SmartLink.

"Company" mode

Functions of the company card

Company card insertion

Prepare data download

Company card withdrawal

■ Functions of the company card



The company takes care for the correct use of the company card(s). Please observe the legal stipulations applicable in your country!

3

The company card identifies the company and registers it into the DTCO 1381, the first time that the card is inserted. Thus, the access rights to the data assigned to the company will be ensured.

The inserted company card authorises you:

- To lock-in and lock-out the company when using this DTCO 1381, for example on sale of the vehicle, expiry of the vehicle lease etc.
- If necessary (one time), the entry of the member state and the vehicle registration number of the vehicle.
- To access data from the data memory and, especially data that has been assigned specifically to this company.

- Access to data from an inserted driver card.
- To display, print out or download data via the download interface.



The company card is designed for the data management of the company only and must not be used for driving! If the company card is used for driving, a message will be displayed.

Downloading of data at regular intervals is compulsory in most member states. In the following situations download of data from the data memory is also recommended:

- Sale of the vehicle,
- Immobilisation of the vehicle,
- Replacement of a defective DTCO 1381.

► Menu functions in the "company" mode

In principle, follow the same procedure when navigating in the menu functions.

➔ Refer to "Calling up menu functions" on page 52.

If, however, the company card is in card slot 2, all main menus assigned to card slot 2 will remain blocked.

➔ Refer to "Menu access blocked!" on page 61.

In this case, you can only display, print out or download data from a driver card inserted in card slot 1.


➔ Refer to "Overview of the menu structure" on page 59.





■ Company card insertion



Insert company card

1. Switch on the ignition (if required, due to an ADR variant).
2. Press either combination button for more than two seconds. The corresponding card tray is opened.
3. Open the card tray cover.
4. Insert your company card (with the chip facing upward and the arrow pointing forward) into the card tray.
5. Close the cover and push the card tray in until it engages.

 The company card determines the language of the display. As an alternative, you can individually set a preferred language.
 ➔ Refer to "Setting the language" on page 53.

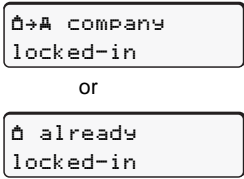Step / menu display	Explanation / meaning
6. 	Greeting text: The set local time "12:50" and the UTC time "10:50UTC" will appear for approximately 3 seconds (time offset = 2 hours).
7. 	The name of the company appears. A progress bar indicates that the company card is being read. If required, the DTCO 1381 may order you to enter the vehicle registration number. <ul style="list-style-type: none"> • Select "Yes" and confirm with the button OK, ➔ see page 28.
8. 	If the company card is inserted the first time, the company will automatically be locked-in the DTCO 1381. The company lock function is activated. Thus, the protection of company-specific data is ensured!
9. 	After reading is complete, the standard display will appear. The DTCO 1381 is in the "Company" mode, symbol "1" (1).

► Enter vehicle registration number

Step / menu display	Explanation / meaning
<p>1. </p>	<p>If the next query appears,</p> <ul style="list-style-type: none"> • select "Yes" and confirm.
<p>2. </p>	<ul style="list-style-type: none"> • Select and acknowledge the country. <p>First character field to be entered is shown by a flashing cursor "_".</p> <ul style="list-style-type: none"> • Select and confirm desired character. • Repeat process, maximum 13 positions.
<p>3. </p>	<ul style="list-style-type: none"> • If less characters are required press key OK. • Confirm entry once again with the key OK.
<p>4. A technical data printout takes place automatically.</p>	
<p>5. </p>	<ul style="list-style-type: none"> • Please verify your entry! • Select "Yes" and confirm. <p>If the registration number is wrong, select "No" and confirm. Step 1 appears, repeat the entry.</p>

Note: The entry of the vehicle registration number is a one-time entry. Enter the vehicle registration number in the DTCO 1381 exactly as it is on the vehicle. Any change after confirmation of the entry is only possible through an authorised specialist workshop using a workshop card.


Entry:

Use the buttons **▲** or **▼** to select the desired function and confirm your selection with the **OK** button.

Correct the entry:

Gradually navigate back to the previous position with the key **←** and repeat the entry(ies).

Printout: Technical data

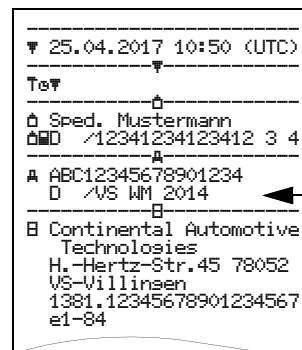

■ Prepare data download




Danger of explosion

Please observe the instructions for transport and handling of hazardous materials in explosion-risk environments.

When loading and unloading hazardous materials ...

- the covering cap (1) must be closed
- and no data may be downloaded.

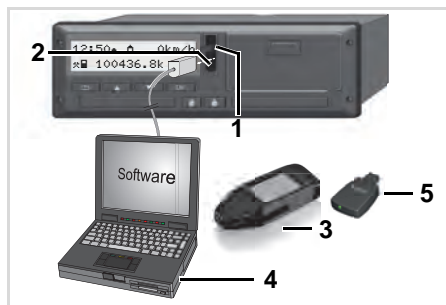


Connection to download interface

1. Open the covering cap (1) upwards
2. Connect the Laptop (4) with the download interface (2).
3. Start the reading software.
4. Or insert the Download Key (3) into the download interface.



Communication between the DTCO 1381 and a Bluetooth-enabled device is possible with a DTCO SmartLink (5).

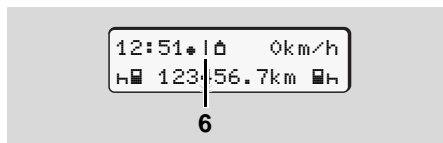

Standard display (a): Identification Data transmission running

The symbol (6) appears during the data transmission.



Do not under any circumstances interrupt the connection to the download interface. Leave the ignition on with an ADR variant *.

5. After downloading the data, make sure you always close the covering cap (1).

Data identification

Before the data is downloaded, the DTCO 1381 will attach a digital signature (identification) to the copied data. With this signature, the data can be assigned to the DTCO 1381 and permit checking of the data's completeness and authenticity.


Remote download *

With a fleet management system, data can also be downloaded remotely following authentication of a company card.




For detailed information about the reading software, please refer to the appropriate documentation.

■ Company card withdrawal


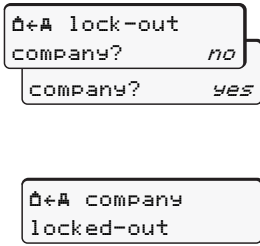


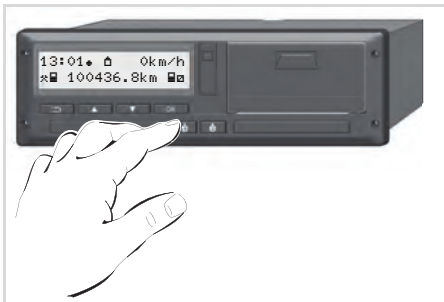


 You can only withdraw the company card from the card slot when the vehicle is not moving!

3



Request company card

1. Switch on the ignition (if required, due to an ADR variant).
2. Request the card from card slot 1 or card slot 2 for ejection; ➔ see page 14.

Step / menu display	Explanation / meaning
<p>3. </p>	<p>The name of the company appears. A progress bar shows that the DTCO 1381 is transferring data to the company card.</p>
<p>4. </p>	<p>No company Lock-out</p> <ul style="list-style-type: none"> • Use the buttons  /  to select "No" and acknowledge with the button . <p>Company Lock-out</p> <ul style="list-style-type: none"> • Select "Yes" and acknowledge with the button . <p>The company lock function is deactivated. The saved data of your company remains, but are locked out for any other company!</p>
<p>5. </p>	<p>The company card is released; the standard display appears.</p> <p>As applicable, a notice may appear that the periodical inspection is pending or the validity of the company card is expiring, ➔ see page 85.</p> <p>The DTCO 1381 is in the "Operational" mode again, symbol "⊞" (1).</p>

Operational mode

Inserting driver card(s)


Setting activities

Downloading driver card data

Withdrawing driver card(s)

Driver / vehicle change during operation

■ Inserting driver card(s)

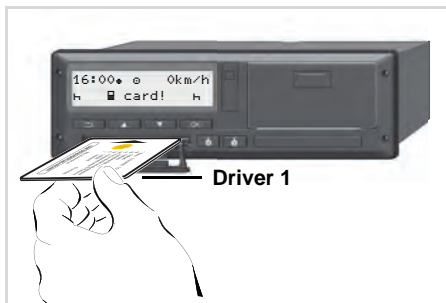

Operational note after ignition on: Driver card in slot 1 missing.



In accordance with responsible driving behavior as described in the EU regulations and in the general interest of traffic safety, please do not attempt to insert the driver card(s) while the vehicle is in motion!

It is possible to insert the driver card while the vehicle is moving, but this will be shown and saved as an event!
 ➔ Refer to "Overview of the events" on page 76.

1. Switch on the ignition (if required, due to an ADR variant).
2. For driver 1, keep the Driver 1 combination button pressed for more than 2 seconds. The card tray is then opened.
3. Open the card tray cover.
4. Insert your drivercard (with the chip facing upward and the arrow pointing forward) into the card tray.
5. Close the cover and push the card tray in until it engages.
6. The subsequent procedure is menu-guided, ➔ see page 33.
7. As soon as the driver card of driver 1 has been read in, **driver 2 can** insert his driver card into card tray 2.

Remark

Menu guidance is carried out in the language stored on the driver card. As an alternative, you can individually set a preferred language. Menu functions for the display and printout of driver data are only available when a corresponding driver card is inserted. Thus the menu item "Printout driver


"Z", for example, is only displayed if a driver card is inserted in card slot 2.

➔ Refer to "Setting the language" on page 53.

► Manual entries



According to the EU regulations, activities, which cannot be registered on the driver card, are to be added by means of manual entry. (For details on activities, ➔ see page 39.)

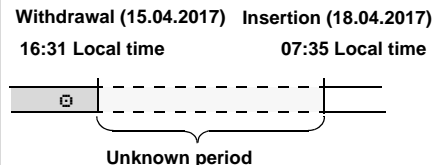

Example of unknown period

The following entry scenarios are possible after each time the driver card is inserted:


- Add activity rest period "H"; example 1, ➔ see page 36.



- Continue work shift; example 2, ➔ see page 37.
- Continue, end a work shift and/or prefix activities to a work shift; example 3, ➔ see page 38.

Fundamental course of action


- Select the desired function, activity or numeric value with the keys ▲ / ▼ in the entry field.
- Confirm your selection with the button OK.




Greeting text: The set local time "07:35*" and the UTC time "05:35UTC" appear for approx. 3 seconds (time offset = 2 hours).




The driver's last name appears. A progress bar indicates that the driver card is being read.



The date and time of the most recent card withdrawal will be displayed in local time (symbol "*") for approx. four seconds.

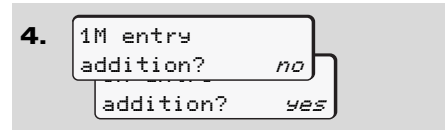


- If you do not want to add **any activities**, select "No"; for more options see step 9.
- By selecting "Yes", you request DTCO 1381 to make manual inputs.



"M" = Manual entry;
 "H" = Entry field of the activity is flashing

The period between removal (1st line) and current insertion (2nd line) in local time appears.

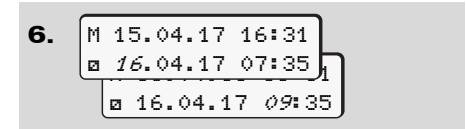

2nd line = entry block

You can successively enter the logically possible variables (flashing entry fields) in the following order:


"Activity – Day – Month – Year – Hour – Minute".


The process ends when the time of the insertion operation is reached.

The following request appears before the manual entries have been accepted.




- Select and acknowledge the country. ⇨⇨

- If required, select and acknowledge the region.
- You can abort the entry of a country with the button .




- Confirm entry with "Yes".
- Select "No".
➔ Refer to "Correction possibilities" on page 34.




The standard display (a) appears. Symbols of the card symbol which are displayed before have the following meaning:

- "—" The driver card is in the card slot.
- "■" You can start the journey, relevant data are read in.

 Symbol "■" is displayed for both card slots.


If the cards for driver 1 and driver 2 are inserted, driving can be commenced as soon as both symbols"■" are displayed for driver 1 and driver 2.

The beginning of a trip ends every started manual input. Pending manual entries for the other card slot are no longer possible.


 While the driver card is being read, some functions are not possible.

- Calling up menu functions
- Requesting a tachograph card



If a menu button or the ejection button is pressed, a message will be displayed.

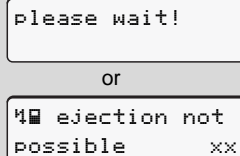



► Correction possibilities

You can select and correct the possible variables with the key  (backspace) directly in the entry block.


In the event that you do not accept the entries at query "M confirm entry?", first step 4 appears and subsequently the first entry block (step 5) requires to be completed.



You can only successively correct the possible variables.

 When pressing and holding key , you will jump to the next entry field or to the next complete entry block, respectively.

► Country entry during manual entry

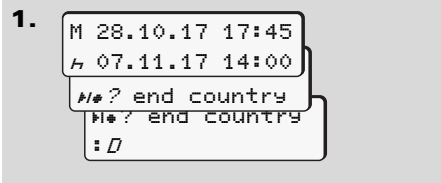

- Select and acknowledge the symbol "H#? end country" in the first entry field "H". (Only possible when the time of the first manual entry does not match the time of the country entered during the last card removal.)

- Select and acknowledge the country.

Or:



- Select and acknowledge the symbol "H#? bes. country".
- Select and acknowledge the country.

Selecting the countries

The most recently entered country appears first. By pressing the buttons ▲ / ▼, the four most recently entered countries will appear. Symbol: Colon in front of the country symbol "H#B".

Further selection is made in alphabetic order starting with letter "A":


- using key ▲ A, Z, Y, X, W, ..., etc.;
- using key ▼ A, B, C, D, E, ..., etc.

➔ Refer to "Country symbols" on page 99.

☞ Pressing and holding down the keys ▲ / ▼ will accelerate the selection (auto-repeat function).

► Aborting the entry procedure

If no entry is made during the entry procedure, the following display will appear after 30 seconds.

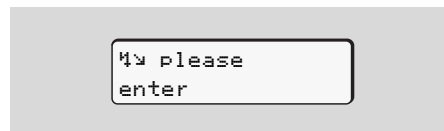

If the button **OK** is pressed within an additional 30 seconds, then the entry can be continued.


After this time or when driving commences, the driver card will be read to completion and the standard display **(a)** will appear.

As the data entered must be verified the data will be not be saved. This affects the remote entry of data as well as direct entry in to the DTCCO 1381.

Aborting the manual entry procedure by requesting the driver card.


➔ Details refer to "Card withdrawal during manual entry" on page 42.

► Add "Rest period" activity

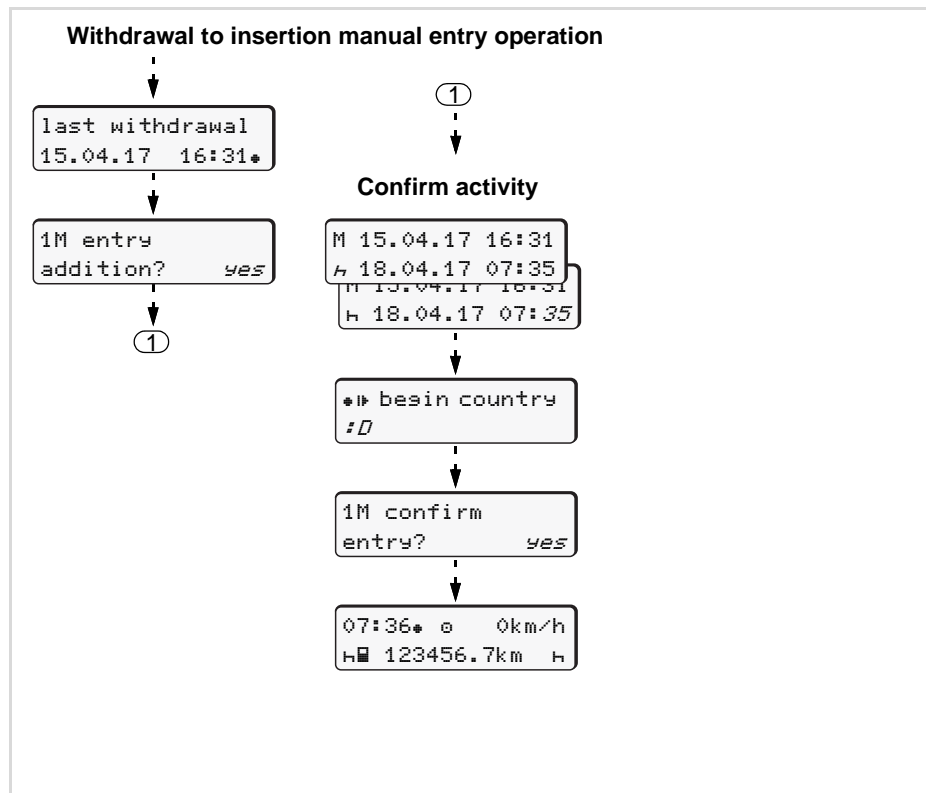

Example 1:


Withdrawal (15.04.17)	Insertion (18.04.17)
16:31 Local time	07:35 Local time




Please note: Entry takes place in local time.

1. Press and hold key **OK**.
2. Automatically jumps to the last entry field (minutes flash).
3. Confirm entry with key **OK**.
4. Follow the menu guidance.

► Continuing the work shift

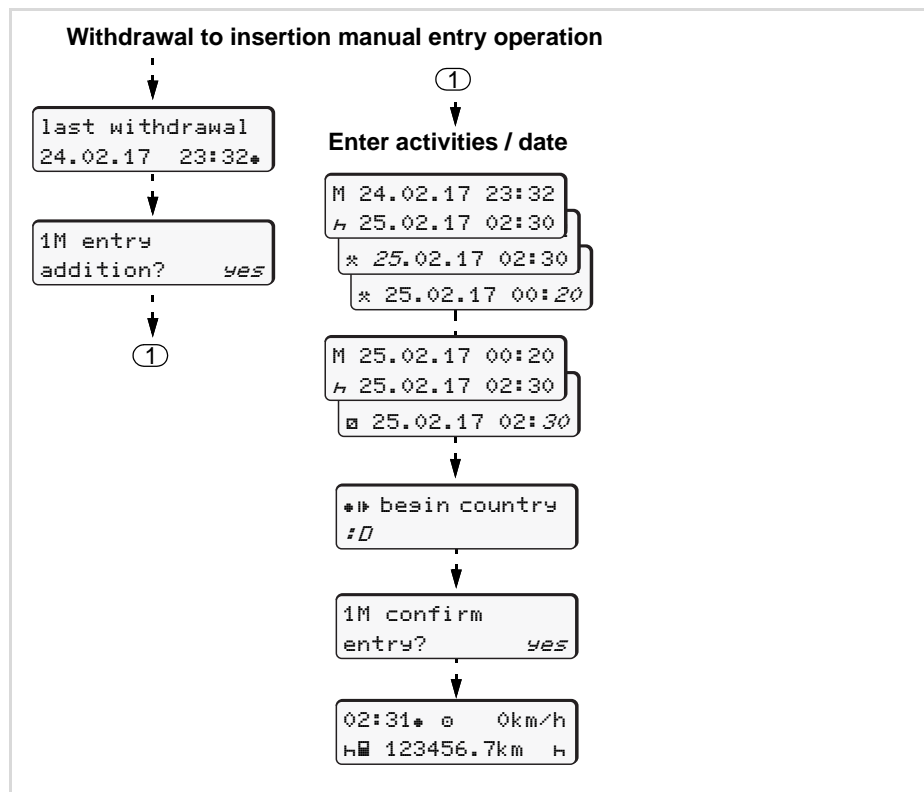


Example 2:

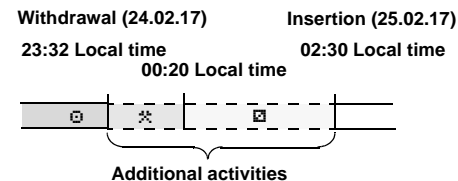


Please note: Entry takes place in local time.

1. Set and confirm first activity "∗".
2. Set and confirm the day, set and confirm hours, set and confirm minutes.
3. Set and confirm second activity "▣".
4. Press and hold key **OK**, until the minutes flash.
5. Confirm entry with key **OK**.
6. Follow the menu guidance.

► Continuing the work shift and prefixing activities to a work shift

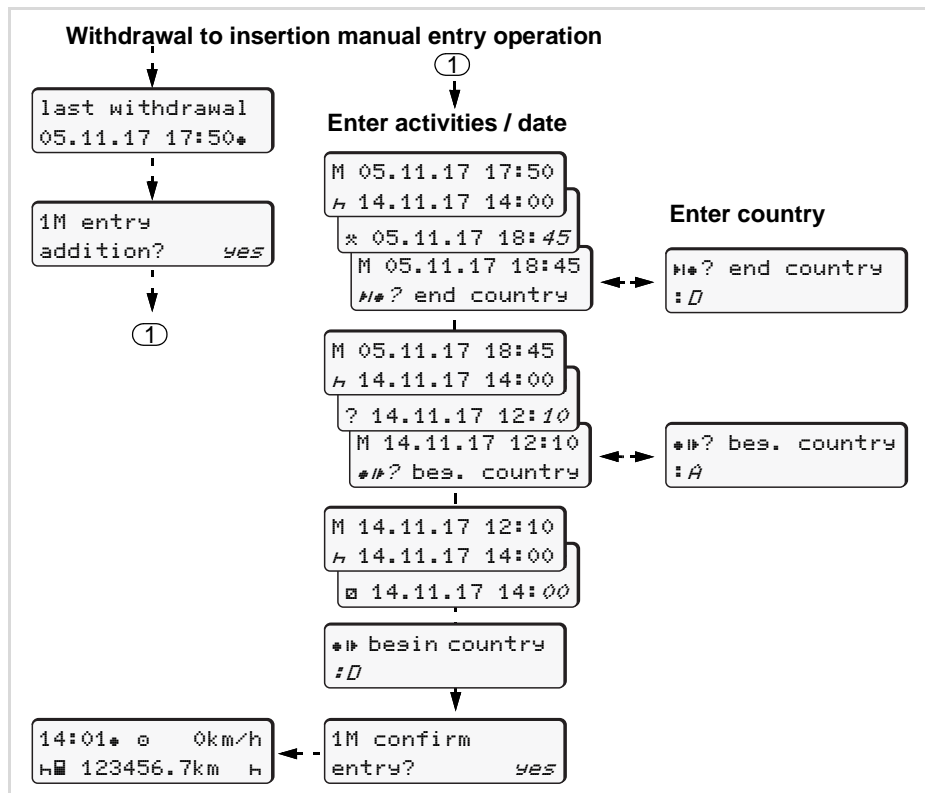

Example 3:

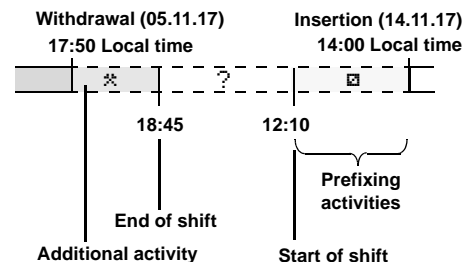

Please note: Entry takes place in local time.

1. Set and confirm first activity "*" with date, time.
2. Select and acknowledge the symbol "H#? end country".
3. Select and acknowledge the country.
4. Set and confirm activity "?" = unknown time with date, hour.
5. Follow the same procedure until the time entries of the insertion-withdrawal process has been completed.


■ Setting activities

- ⊗ = Driving time (automatic when driving)
- * = Other work time
- ⊠ = Availability (waiting time, co-driver time, driver 2 sleeper-cab time during a journey)
- H = Break times and rest periods

► Manual setting

- 👉 The activities may be set only if the vehicle is stationary!

1. As the driver, press the mode activity button for **driver 1**; ➔ see page 14. The standard display (a) appears.



2. Continue pressing the button until the desired activity (H ⊠ *) appears in the display (1). After approx. 5 seconds, the previous display appears.

3. As the 2nd crew member, press the mode activity button for **driver 2**; ➔ see page 14.

► Automatic setting

The DTCO 1381 switches automatically to the following activities:


for ...	Driver 1	Driver 2
Driving	⊗	⊠
Vehicle stop	*	⊠

⚠ At the end of a shift or at the start of a break, **always** set the activity to "H". This will ensure that the VDO Counter * provides an accurate calculation.

► Automatic setting after ignition on/off *

After ignition on/off, the DTCO 1381 can be configured to switch to a defined activity; for example "H".

The activity (1) and/or (2) which changes automatically on the basis of ignition on or off, appears in the standard display (a) and flashes for approx. 5 seconds. Then, the previous display will appear again.

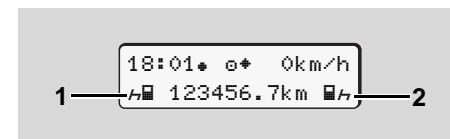

Flashing of the activity(ies) in the standard display (a)

- 👉 As necessary, change the set activity according to your current task.

Note


After switching the ignition on/off the default mode activity triggered automatically by the DTCO 1381 can be programmed by a company using a company card (➔ see page 23.) or at an authorised workshop (➔ see page 122.)

► **Handwritten activity entries**

According to the directive, you (as driver) are obligated to note activities with handwritten entries in the following cases:

- When the DTCO 1381 is defective.
- If the driver card is lost, stolen, damaged, or if the driver card malfunctions, a daily printout from the DTCO 1381 must be generated at the beginning and end of the journey. If necessary, you must insert the availability and other working times by handwritten entries.

The rear side of the paper roll can be used to make handwritten entries **(2)** of your activities and to complete the printout by personal information **(1)**.

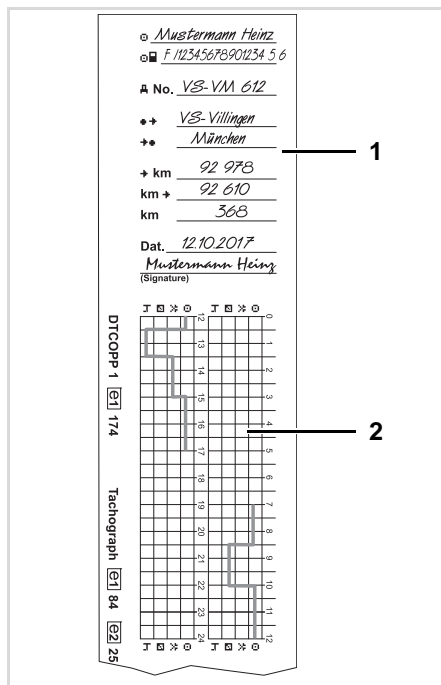

Handwritten activity entries

Personal information

- ⊙ First and last name
- ⊙ Number of the driver card or the driving licence
- ⊙ No. Vehicle registration number
- ⊙ Location at the beginning of the shift
- ⊙ Location at the end of the shift
- ⊙ km Odometer reading at the end of the shift
- ⊙ km Odometer reading at the beginning of the shift
- km Kilometres travelled
- Dat. Date
- Sig. Personal signature

Please observe the legal stipulations applicable in your country!

■ Downloading driver card data




Danger of explosion

Please observe the instructions for transport and handling of hazardous materials in explosion-risk environments.

When loading and unloading hazardous materials ...

- the covering cap (1) must be closed
- and no data may be downloaded.

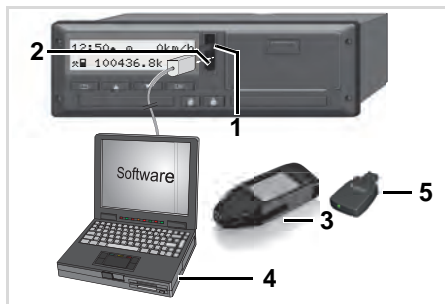

Connection to download interface



Please make sure that only one driver card is inserted! Otherwise there will be no transfer of data.

1. Open the covering cap (1) upwards
2. Connect the Laptop (4) with the download interface (2).
3. Start the reading software.
4. Or insert the Download Key (3) into the download interface.



Communication between the DTCO 1381 and a Bluetooth-enabled device is possible with a DTCO SmartLink (5).



Do not under any circumstances interrupt the connection to the download interface. Leave the ignition on with an ADR variant *.


5. After downloading the data, make sure you always close the covering cap (1).

Data identification

The copied data are provided with a digital signature (identifier). With this signature, the data can be assigned to the driver card and permit checking of the data's completeness and authenticity.




For detailed information about the reading software, please refer to the appropriate documentation.

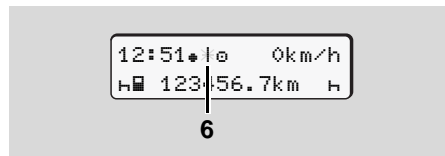


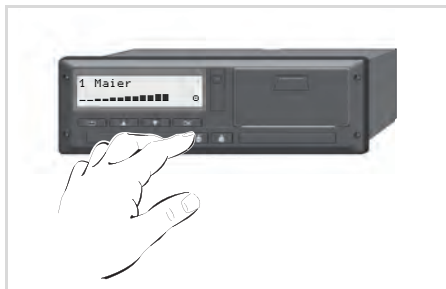
Standard display (a): Identification Data transmission running

The symbol (6) appears during the data transmission.

■ Withdrawing driver card(s)

 The driver card should be removed from the card slot at the end of a daily shift. When the driver or vehicle is changed, the driver card should generally be withdrawn from the card slot.
 ➔ Refer to "Driver / vehicle change during operation" on page 44.

 You can withdraw the driver card from the card slot only when the vehicle is not moving!




Driver card request

1. Switch on the ignition (if required, due to an ADR variant).
2. Enter the corresponding activity; for example, at the end of the work shift to "H".
3. Eject the card from card slot 1 or card slot 2; ➔ see page 14. The subsequent procedure is menu-guided, ➔ see page 43.

Card withdrawal during manual entry





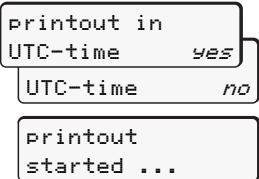

1. Eject the card from card slot 1 or card slot 2; ➔ see page 14.
2. Select and acknowledge the following queries with "No".

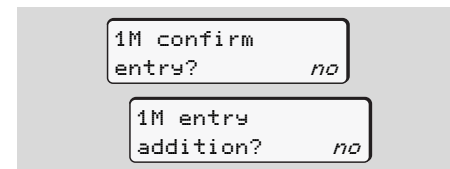




3. Continue, ➔ see page 43.

The manual entry is aborted, the DTCO 1381 saves the activity "?" for the unknown period.

► Menu guidance after withdrawing driver card


Step / menu display	Explanation / meaning
1. 	The driver's last name appears. A progress bar shows that the DTCO 1381 is transferring data to the driver card.
2. 	<ul style="list-style-type: none"> • Select and acknowledge the country. • If required, select and acknowledge the region. • Use button  to abort the entry of a country if you, for example, want to continue your work shift.
3. 	<ul style="list-style-type: none"> • Select "Yes" and acknowledge if you need a printout, otherwise acknowledge "No".
4. 	<ul style="list-style-type: none"> • Acknowledge "Yes" if you want the printout in UTC-time (required by law). • If you select "No" and acknowledge, you will receive a printout in "Local time". <p>When the function is selected, the continuation of the action will appear in the display.</p>
5. 	The driver card is released; the standard display (a) appears.

Use the buttons  or  to select the country and confirm your selection with the  button.

Option DTCO 3.0a/b

A message may appear in advance that the validity of the driver card is due to expire, a periodic inspection is due, or the next download of the driver card is required. ➔ see page 85.

■ Driver / vehicle change during operation

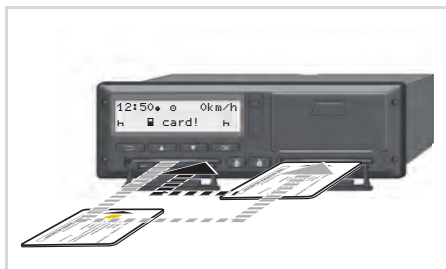

Exchanging driver card(s)

Case 1: The crew exchanges positions, driver 2 becomes driver 1

1. Withdraw the driver cards from their respective card slots and exchange them by inserting them into the other card slots.
2. Set the desired activity.

Case 2: Driver 1 and/or driver 2 leave the vehicle

1. When removing the driver card from the DTCO 1381, the driver can generate a daily card printout
2. The new vehicle crew insert their new driver cards, depending on function (driver 1 or driver 2), into the card slots.


Case 3 – Mixed operation: Vehicle usage with different tachograph types

- For example, analogue tachographs or ...
- Digital tachographs with driver card according to EC Regulation (EEC) no. 3821/85 annex I B, e.g. DTCO 1381 3.X.

During an inspection, the driver must be able to present the following items for the current day and for the previous 28 calendar days:

- the driver card **(1)**,

- the relevant daily printouts from the digital tachograph **(2)**, e.g., if the driver card is damaged or fails to operate properly,
- the charts covered with data **(3)**
- and, if necessary, handwritten information concerning the activities.

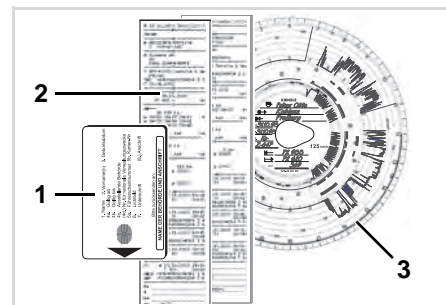

Please observe the legal stipulations applicable in your country!

► Documents to be kept while driving

Convalescence / Recreation holiday:

Pursuant to directive 2006/22/EC of the European Commission, the driver must have an attestation relating to the following circumstances over the previous 28 days:

- Period during which the driver was on sick leave.
- Period during which the driver was on holiday.
- Period for a journey which took place outside of the scope of application of Council Regulation (EC) No. 561/2006 or the AETR.



You will find a printable version of the form on the Internet at:
ec.europa.eu

**ATTESTATION OF ACTIVITIES UNDER
REGULATION (EC) NO 561/2006
OR
THE EUROPEAN AGREEMENT CONCERNING THE WORK OF CRE
VEHICLES ENGAGED IN INTERNATIONAL ROAD TRANSPORT (AETR)**

*To be filled in by typing and signed before a journey
To be kept with the original tachograph records wherever they are required to
False attestations constitute an infringement*

1. Name of the undertaking: _____
2. Street address, Postal code, City, Country: _____, _____, _____
3. Telephone number (including international prefix): _____
4. Fax number (including international prefix): _____
5. E-mail address: _____

I, the undersigned
6. Name: _____
7. Position in the undertaking: _____
declare that the driver
8. Name: _____
9. Date of birth: _____
10. Driving licence number or Identity card number or Passport number: _____
for the period
11. from (time-day-month-year) _____-_____-_____
12. to (time-day-month-year) _____-_____-_____
13. was on sick leave (**)
14. was on annual leave (**)
15. drove a vehicle exempted from the scope of Regulation (EC) No 561/2006 (**) (**))
16. For the undertaking, place _____ date _____ signature _____
17. I, the driver, confirm that I have not been driving a vehicle falling under the scope of Regulation (EC) No. 561/2006 or AETR during the period mentioned above.
18. Place _____ date _____ Signature of the driver _____

(*) This form is available in an electronic and printable version on the Internet at ec.europa.eu.
(**) Only one of the boxes 13, 14 or 15 may be chosen.

Extract: Form sheet Activities

Abnormal cases:

Provided that road safety is not thereby jeopardised and to enable the vehicle to reach a suitable stopping place, the driver may depart from Drivers Hours rules to the extent necessary to ensure the safety of persons, of the vehicle or its load. The driver should indicate the reason for such departure at the latest on arrival at a suitable stopping place:

- manually on a chart
- printout from the DTCO 1381
- or in the duty roster.

Printer Handling

Insert paper roll

Printout of data


■ Insert paper roll

Please note!

Use (order) only paper rolls (original VDO printer paper) on which is visible the following markings:

- Tachograph type (DTCO 1381) with approval mark "E184"
- and approval marks "E174" or "E189".

5

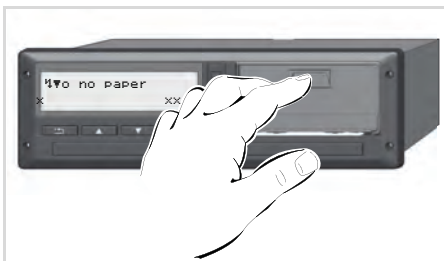

Press the unlock button

1. Press the unlocking upper edge of the printer panel and the printer drawer opens.




Danger of injury
Depending on the volume of information printed, the thermal printing head may be very hot. You can burn your fingers!

Do not reach into the printer compartment after having removed the printer drawer.




Damage to the device
Do not insert objects into the printer compartment in order to prevent damage to the device.

- (1) Pull the printer drawer out of the DTCO.

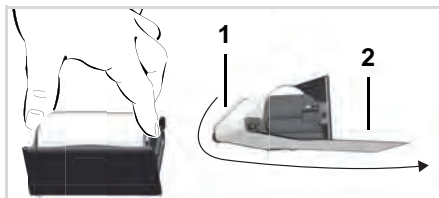


Insert paper roll

2. Insert a new paper roll according to the illustration and guide it via the pulley (1).

 Make sure that the paper roll does not become jammed in the printer drawer and the start of the paper (2) extends below the edge of the printer drawer!


3. Push the printer drawer into the printer compartment until it engages.
4. The printer is then ready for operation and you can start a printout.

 If the paper runs out during a printout, the printout must be started again via the menu function after having inserted a new paper roll.

■ Printout of data


► Start printout

- ☞ Printing is only possible when ...
- the vehicle is stationary and the ignition is switched on (required only for ADR variant *),
 - the printer drawer is closed and a roll of paper is inserted,
 - no other faults prevent printing.



1. Request a daily printout through the menu.
 - ☛ Refer to "Calling up menu functions" on page 52.
2. Acknowledge the menu display with the **OK** button.
3. Select and acknowledge the printout type (UTC or local time).
4. The printout will start. Wait until the printout is complete.

- ☞ When tearing off a printout, take care that the card trays are closed, otherwise they might be soiled by paper particles.

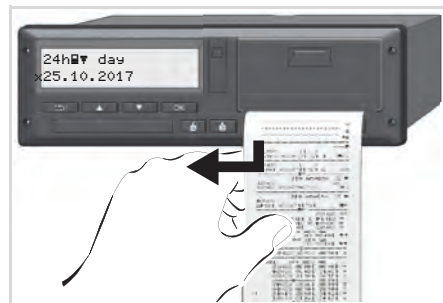


Tear off the printout from the paper roll

5. Pull the printout up and down over the cutting edge and then tear the printout from the roll of paper.
6. The printout should be kept clean and protected from dirt, strong light, and sunlight.

► Cancel printout


1. While the printout is running, press the button **OK** and the following question will appear.

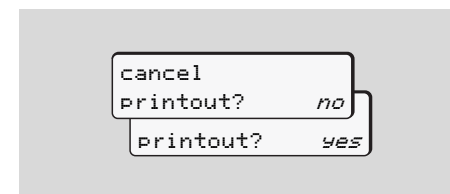

2. Use the buttons **▲** / **▼** to select the desired functions and confirm your choice with the button **OK**. The printout will be either continued or cancelled.

► Things to note when printing

- You will see a coloured mark on the rear side of the printout shortly before the paper roll is empty.
- When the paper roll is empty, you will see the following message.



NO PAPER xx

5

- If the paper runs out during a printout, the printout must be started again via the menu function after having inserted a new paper roll.

► Clear paper jam

If a printout is not torn off properly, or if the paper roll is used up, the paper may become jammed and then prevent the next printout from continuing through the paper slot

1. Open printer drawer.
 - Refer to “Insert paper roll” on page 48.
2. Tear off any crumpled paper from the roll and remove any remaining bits of paper from the printer drawer.
3. Insert a paper roll again and then push the printer drawer into the printer compartment until it engages.



Please observe the given warning messages!

➤ Refer to “Insert paper roll” on page 48.



At the beginning of each printout, there is an empty space of approx. 5 cm.

Menu functions

Calling up menu functions

VDO Counter *

Overview of the menu structure

Main menu printout driver 1 / driver 2

Main menu, vehicle printout


Main menu entry driver 1 / driver 2

Main menu entry vehicle

Main menu display driver 1 / driver 2

Main menu display vehicle

■ Calling up menu functions

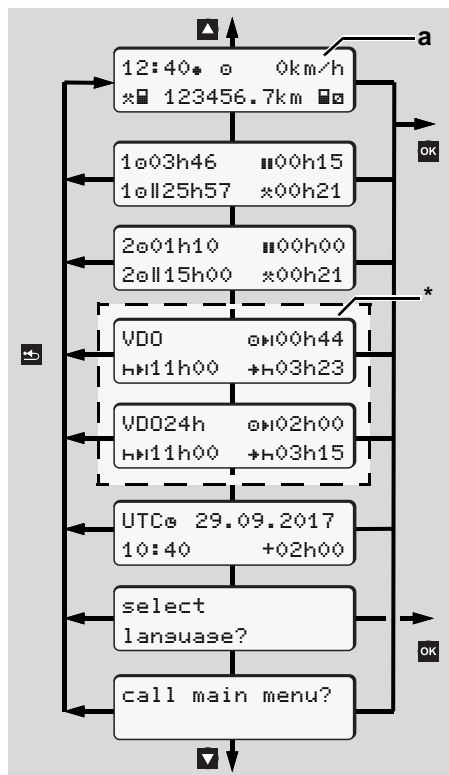

Navigating in the standard display

6

☞ Menu functions for the display and printout of driver data are only available when a corresponding driver card is inserted. Thus the menu item "Printout driver 2", for example, is only displayed if a driver card is inserted in card slot 2.

☞ When selecting a lower menu item and no input is made within 30 seconds, the DTCO 1381 reverts back to the last first menu level item. Any inputs not confirmed up to that point are not accepted.

▶ When the vehicle is stationary

You can access the following information with the keys ▲ / ▼ within the first menu level.

- Detailed times of the inserted driver card(s).
- VDO Counter * information - daily and weekly driving, work, rest / break time planning and availability.

☞ For more details, see "VDO Counter *" from page 54.

- The UTC time with date as well as the set offset for the local time.
- The menu to set the desired language. ☞ Refer to "Setting the language" on page 53.
- Use the key ⏪ to return directly to the standard display (a).

The extensive menu functions will appear when pressing the key OK.

☞ Refer to "Overview of the menu structure" on page 59.

▶ Change of activities

1. When pressing activity button "1" / "2", the standard display (a) will appear (a).
2. If necessary, change the currently displayed activity. After 5 seconds, the DTCO 1381 switches back to the previously set display.


▶ Display at start of drive

When driving commences, the most recently set standard display **(a)** or **(b)** appears.

☞ If activated, the standard display for the VDO Counter * can also be displayed.

➔ Details refer to "Standard display(s)" on page 19.

► Displaying the times of the driver card

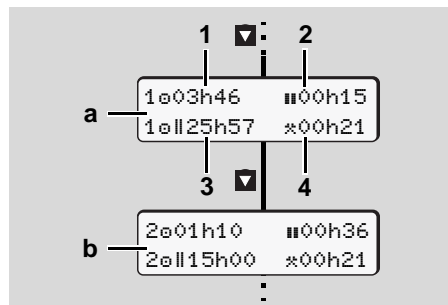

Data display of driver 1 and 2

- (a)** Times of driver 1
- (b)** Times of driver 2

(1) Driving time "e" of Driver 1 since a valid break time.


- (2)** Valid break time "||" in cumulative break periods of at least 15 minutes followed by 30 minutes, in accordance with regulation (EU) no. 561/2006.
- (3)** Sum of driving times over two weeks
- (4)** Duration of the set activity

☞ If the driver card is missing, times (except for pos. 3) which are assigned to the respective card slot "1" or "2" will appear.

► Setting the language

☞ Observe the paragraph "Storing the language setting" so that the DTCO 1381 will temporarily memorise the desired language.

1. Use the buttons ▲ / ▼ to select the function "select language?" and press the button **OK**.
2. Use the buttons ▲ / ▼ to select the desired function and confirm your selection with the **OK** button.

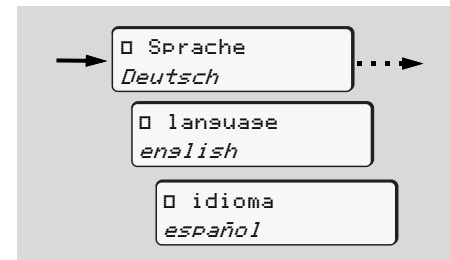

Select the desired language

3. The DTCO 1381 indicates the action for about three seconds in the selected language.

Storing the language selection

If, at the time of the language setting, only your driver card or company card is in the card slot 1, the DTCO 1381 memorises the preferred language for your card number.

When withdrawing / inserting the tachograph card again, the menu guidance as well as all displayed texts will be in the selected language.

The DTCO 1381 reserves up to five storage areas. If all storage areas are full, the oldest saved value will be overwritten.

■ VDO Counter *



Please note!

Because of differing interpretations that may be made by the enforcement authorities with regard to the Reg. (EU) 561/2006 and the AETR Regulations and because of other system constraints the VDO Counter does not discharge the user from his obligation to register his driving, rest, availability and other working times and to evaluate them by himself to allow him compliance with the regulations in force. The VDO Counter does not claim to display the legal regulations in a generally valid and error free manner. Further information on the VDO Counter are available on the Internet at www.fleet.vdo.com.




The following conditions are obligatory in order to analyse the data and display useful Drivers Hours information:

- Complete shift time activities, including manual entries to the driver card.

- Correct activity settings during the shift - no operational error. For example, unintentional setting of the work time activity "x" instead of a daily rest period "h"!
- Entry of ferry/train special condition and the current activity.

► Layout of the VDO Counter display

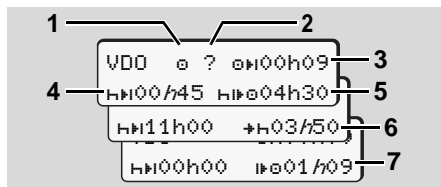

VDO Counter: Layout of the display



The flashing "h" means that this part of the display is currently active.

(1) Current set activity

(2) "?" = User information

Periods with unknown activity "?" or insufficient data are recorded on the driver card (e.g. use of a new driver card). The VDO Counter evaluates

unknown activities, as the activity "h". If a relevant time overlap is determined in the driver activities, then this will be shown in the display by the "!" symbol instead of the "?" symbol and the driver activity.

(3) Remaining driving time "0h"

When driving, the display indicates remaining driving time available. (0h00h00 = Driving time completed)

(4) Remaining break time "hH"

Duration of the next required break time / rest period. While the activity "h" is set, the remaining break time will be counted down. (hH00h00 = break finished)

(5) Next available driving time "hHh0"

Duration of the available driving time after after completion of a required break / rest period.

(6) Latest start of the daily rest period "+H"

For example, with the activity "x" being set, the remaining time until the start of your next required daily rest period is displayed.



(7) Beginning of the next driving time "H" " "


You may begin the next driving period only after the end of this time.

► Displays during trip



Please observe the country-specific regulations related to working time!

Example 1:




Activity "a"; "h" = active display

(1) Remaining driving time.

(2) At the end of the driving time (1), at the latest the duration of break (full or continuation of the cumulative break time) shown must be taken.


Example 2:



Activity "a"; "h" = active display

(3) At the end of the driving time (1) at the latest, the legally stipulated rest period displayed must be taken. The rest period may be taken in two parts, the first at least 3 hours long and the second at least 9 hours long.


Example 3:



Activity "a"; "h" = active display

(4) At the end of the driving time (1) at the latest, a regular weekly rest period must be taken or, if allowed, a reduced weekly rest period.

Example 4:



Activity "a"; "h" = active display

(5) The VDO counter takes into consideration a ferry/train specific condition. Prerequisite: correct entry of this specific condition, ► see page 67.

At the end of the driving time (1) at the latest, the daily rest period should continue.

Example 5: OUT of scope



Activity "a"; Out of scope set


(6) The display of the remaining driving time is not active ("h" does not flash), there is no counting down. The VDO Counter evaluates activity "a" as activity "*".



Please note that the VDO Counter driving and rest period calculations correspond to (EU) 561/2006 and not to EEC Regulation 3821/85 Annex 1B. Therefore, the standard display on the DTCO may differ; ► see page 19.

► Display for activity "Break time"


Example 1: Break time

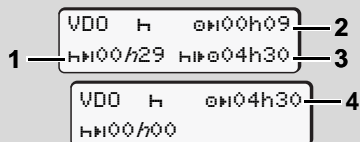

Activity "H"; "h" = active display

- (1) Remaining break time.
- (2) Remaining driving time if the break time (1) is disregarded.
- (3) Duration of the next available driving time after the end of the displayed break time (1).
- (4) Available driving time after a valid break time.


Example 2: Break time



Activity "H"; "h" = active display

- (5) Remaining break time.
- (6) Duration of the available daily driving time after after completion of a required break time (5).


Example 3: Daily rest period



Activity "H"; "h" = active display

- (7) Remaining daily rest period.
If applicable, divided into 3 + 9 hours.

Example 4:



Activity "H"; "h" = active display


- (8) Valid break / rest time has been completed.
Display 00h00 flashes for 10 seconds.
If the rest period is resumed, the duration of the next daily or weekly rest period changes on the VDO Counter.
- (9) Start of next driving time.
Situation: The max. weekly or two weekly driving time has been completed. The daily / weekly rest period has been completed but the new daily driving time can only be

started after the displayed time. (Due to no remaining time left in the current fixed week.)

► Display for activity "Working time"



Please observe the country-specific regulations related to working time!



Activity "*"; "h" = active display


- (1) Duration of the next daily rest period.
- (2) Remaining current driving time .
- (3) Remaining time till next daily rest period.
At the latest before the displayed time reaches zero, a daily rest period must begin.

Note:

The VDO Counter evaluates availability activity "▣" as break time "H" during an interruption of the driving time period (but not as daily rest).

You can access further information with the keys. / .


► Display daily values

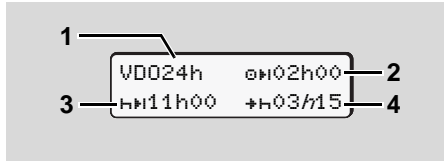

Activity "x/"; "h" = active display

- (1) Symbol for the display of the daily values.
- (2) Remaining daily driving time.
- (3) Duration of the next daily rest period.
- (4) At the latest before the displayed time reaches zero, a daily rest period must begin.

► Display weekly values

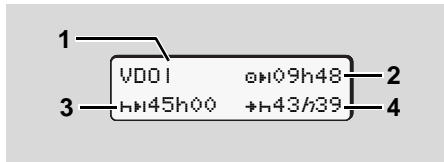


Activity "x/"; "h" = active display

- (1) Symbol for the display of the weekly values since the last weekly rest period.
- (2) Remaining weekly driving time.
- (3) Duration of the weekly rest period.
By the end of six consecutive 24-hour periods from the end of the last weekly rest period there must be a new weekly rest period.
- (4) At the latest before the displayed time reaches zero, the weekly rest period must begin.




The displays for (3) and (4) weekly rest periods can be deactivated for international passenger vehicle journeys.

If the calculation for the weekly values are deactivated, these values are not displayed.

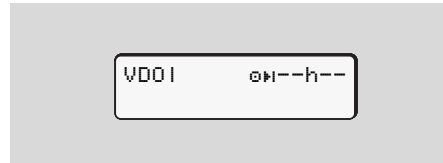

► Status display

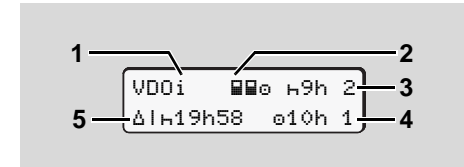

VDO Counter status display

- (1) Symbol for the status display.
- (2) Symbol for crew of two drivers (multi-manning).
Is displayed if crew operation takes place from the beginning of the work shift. The VDO Counter considers the respective valid rules in its calculations. The VDO Counter takes into consideration multi manning rules.
- (3) During this week, a further two reduced daily rest periods can be taken (maximum 3 times per week).
- (4) During this week, a further extended daily driving period (up to a max. 10 hours) can be taken (maximum 2 times per week).
- (5) Reduced weekly rest compensation.
Due to a reduced weekly rest period, the time shown must be compensated together with another rest period of at least 9 hours in one block.




The displays for the reduced (5) weekly rest periods can be deactivated for international passenger vehicle journeys.

If the calculation for the weekly values are deactivated, these values are not displayed.

```
VDOi      H9h 2
          ø10h 1
```

■ Overview of the menu structure

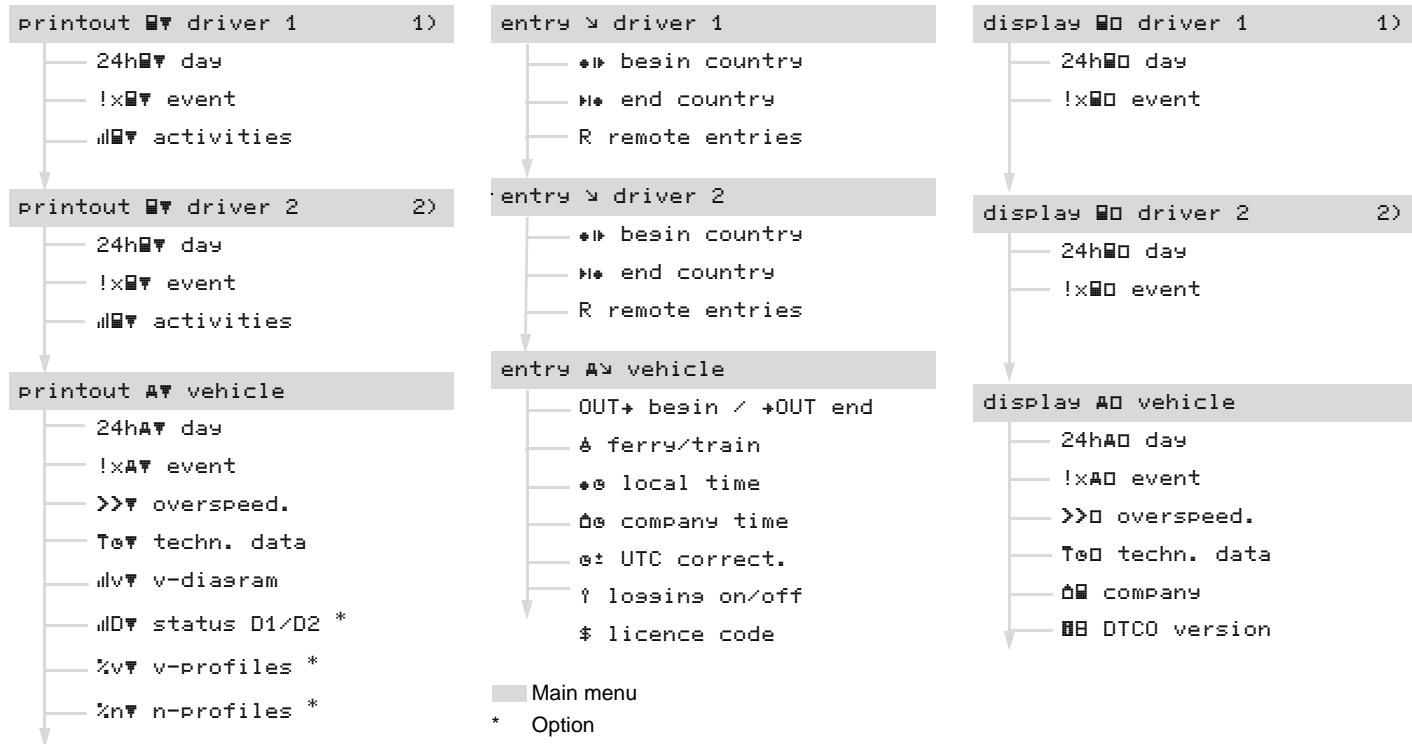

1) Menu functions only shown when the driver card is inserted in card slot 1.

2) Menu functions only shown when the driver card is inserted in card slot 2.

► Navigating in the menu functions

☞ The menu functions may be called only if the vehicle is stationary!

In the case of ADR variants, switch on the ignition (if required) to be able to use the printer and display operating modules without restrictions.


The procedure is always the same and will be described below in detail.

1. Press the button **OK**, you will be in the first main menu.

The display in the first main menu with regard to the display and print menus is based on the driver cards inserted in card slots 1 and 2.


- "Printout driver 1" is displayed when a driver card is inserted in card slot 1.
- "Printout driver 2" is displayed when a driver card is inserted in card slot 2 and card slot 1 is empty.
- "Printout vehicle" is displayed when no driver cards are inserted.

This does not apply for the input menus.

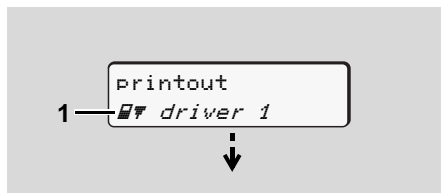


1. Main menu

The flashing action in the second line (*shown in italics*) (1) indicates that there are additional selection possibilities.

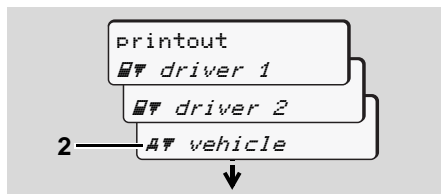

Paging in the main menu


2. Select the desired main menu with the keys **▲** / **▼**, for example a printout of the vehicle data (2), and confirm the selection with the key **OK**.

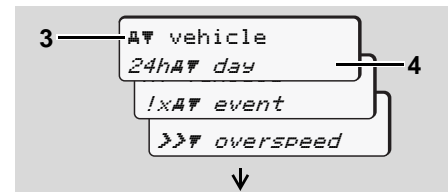

Selecting a menu function

The selected main menu (3) will appear, the possible functions will flash in the second line (4).


3. Select the desired function with the keys **▲** / **▼**, for example a daily printout (4), and confirm the selection with the key **OK**.

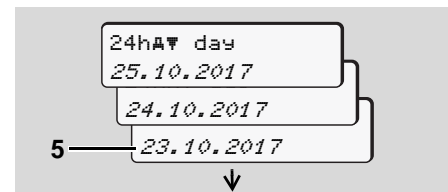

Select desired day

4. Use the buttons **▲** / **▼** to select the desired day (5) and acknowledge the selection with the button **OK**.



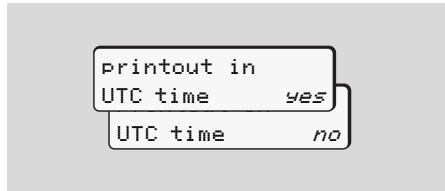

"No" = Printout in local time

5. Select the desired printing type with the keys **▲** / **▼** and confirm the selection with the key **OK**.

The DTCO 1381 reports for 3 seconds that a printout has started. If necessary, you can abort the printout.

➔ *Details refer to "Cancel printout" on page 49.*

The most recently selected menu function will then appear.


6. Select another printout with the keys **▲** / **▼**.
7. Or press the button **↵** and return to the next-higher menu level.

▶ **Menu access blocked!**

If you select this function, an operational note "no data!" will be displayed.

Data access blocked

Access to saved data is regulated by access rights in accordance with the regulations and implemented by means of the respective tachograph cards. Lack of proper authentication is indicated as follows:

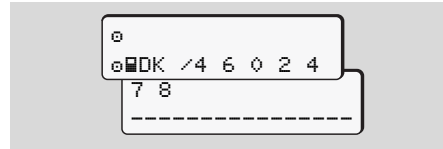

The data appears truncated. Personal data is partially or completely masked.

▶ **Leaving menu functions**


Automatically

The menu is exited automatically in the following situations:

- after a tachograph card is inserted or withdrawn
- or when driving commences.

Manually

1. Continue pressing the button **↵**, until the following question appears.

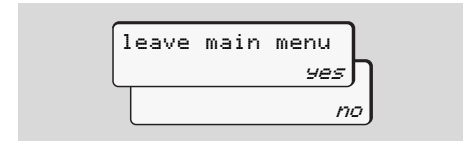


2. Use the buttons **▲** / **▼** to select "Yes" and acknowledge with the button **OK**. Or use the button **↵** to skip the query. The standard display **(a)** appears.

■ Main menu printout driver 1 / driver 2

From this menu you can print out the data of an inserted driver card.

Select the listed functions step by step.

 Switch on the ignition (if required, due to an ADR variant).

Remark

The procedure for driver 2 is identical to that for driver 1 and will not be explained separately. You can select the desired printout type prior to every printout.

6

```
printout in
UTC time   yes
UTC time   no
```

"No" = Printout in local time

► Print daily value

1.

```
printout
[ ] driver 1
```
2.

```
[ ] driver 1
24h [ ] day
```
3.

```
24h [ ] day
23.10.2017
22.10.2017
```

A printout of all activities on the selected day will be made, ➔ see page 101.

► Print events

1.

```
printout
[ ] driver 1
```
2.

```
[ ] driver 1
!x [ ] event
```

A printout of all saved or still active events and faults will be made, ➔ see page 102.

► Print activities

1.

```
printout
[ ] driver 1
```
2.

```
[ ] driver 1
[ ] activities
```
3.

```
[ ] activities
23.10.2017
22.10.2017
```

From the selected day on, there is a printout of all activities of the last 7 calendar days, ➔ see page 106.

■ Main menu, vehicle printout


From this main menu you can print data from the data memory.

Select the listed functions step by step.

☞ If necessary, switch on the ignition in case of the ADR variant.



Note

You can select the desired printout type prior to every printout.

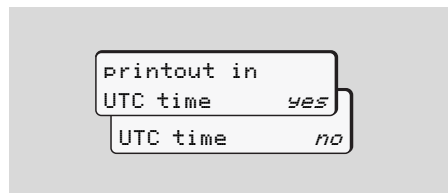


"No" = Printout in local time

► Print daily value from the data memory

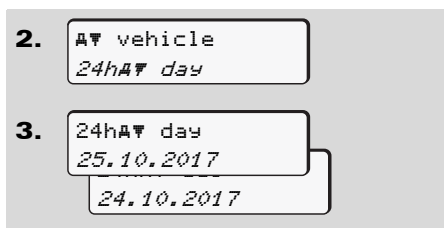


A printout of all driver activities in chronological order, separated by driver 1/ driver 2 will be made, ➔ see page 103.

► Print events from the data memory

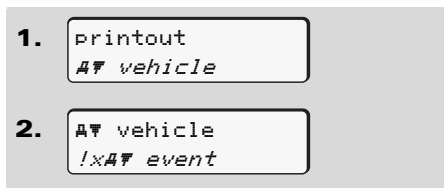


A printout of all saved or still active events and faults will be made, ➔ see page 104.

► Print instances of over-speeding

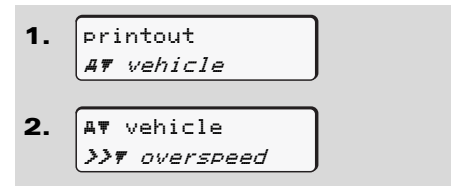

A printout will be made of instances when the overspeed value set in the DTC0 1381 was exceeded, ➔ see page 105.

► Print technical data

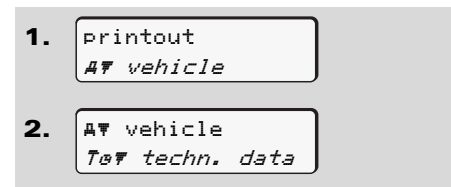

A printout of data about vehicle identification, sensor identification, and calibration will be made, ➔ see page 105.

► Print v-diagram

1.

```
printout
A vehicle
```
2.

```
A vehicle
n v-diagram
```
3.

```
n v-diagram
25.10.2017
24.10.2017
```

From the selected day on, there is a print-out of status inputs of the last 7 calendar days, ➤ see page 106.

► Print speed profiles *

1.

```
printout
A vehicle
```
2.

```
A vehicle
% v-profiles
```
3.

```
% v-profiles
25.10.2017
25.10.2017
```

3.

```
% n-profiles
25.10.2017
25.10.2017
```

A profile printout of the engine speed rpm will be made, ➤ see page 107.

6 From the selected day on, there is a print-out of speed data, ➤ see page 106.

► Print D1/D2 status *

1.

```
printout
A vehicle
```
2.

```
A vehicle
n D status D1/D2
```
3.

```
n D status D1/D2
25.10.2017
24.10.2017
```

A profile printout of the driven speeds will be made, ➤ see page 107.

► Print rpm profiles *

1.

```
printout
A vehicle
```
2.

```
A vehicle
% n-profiles
```

■ Main menu entry driver 1 / driver 2

You can enter the country independently of the function of inserting or withdrawing the driver card.




According to the regulations, driver 1 and driver 2 must separately enter into the tachograph the country in which the respective driver begins or ends his shift.


Remark


The procedure for driver 2 is identical to that for driver 1 and will not be explained separately.


► Enter Begin country

Select the following functions step by step:

1. 

```
entry
v driver 1
```
2. 

```
v driver 1
* begin country
```
3. 


```
* begin country
28.10 11:30 :D
28.10 11:30 :E
```
4. 


```
* begin region
11:30 E AN
```


If necessary, you may be automatically asked to enter the region (step 4).


► Enter End country

Select the following functions step by step:

1. 

```
entry
v driver 1
```
2. 

```
v driver 1
* end country
```
3. 

```
* end country
29.10 11:30 :F
29.10 11:30 :E
```
4. 

```
* end region
11:30 E AN
```

If necessary, you may be automatically asked to enter the region (step 4).

► Activating the remote control

Select the following functions step by step:

6

1.

```
entry
v driver 1
```
2.

```
v driver 1
R remote entries
```
3.

```
R Enable remote
entries?      Yes
entries?      No
```
4.

```
R1 Pair your
device 12345678
```



When using the remote control, the user is solely responsible for the legal completeness and correctness of the inputs and accepts this by using the remote control.

The use of the remote control is not a part of the legal tachograph system. It is used under the operator's own responsibility.

The time periods in which a remote control is used can be printed and displayed. ➡ *For more details, see "Daily printout of the vehicle" from page 103.*

If a DTCO SmartLink is inserted in the tachograph and a Bluetooth device initiates a pairing request, a code is shown on the DTCO 1381 display (step 4), which you need to enter on your Bluetooth-compatible device.



■ Main menu entry vehicle


You can perform the following entries in this main menu.

► Enter Out beginning / end

If you use the vehicle for a journey outside of the scope of the regulations, you can set the function to "Out of Scope" and/or end it again.

Select the following functions step by step.


1. 
2. 



The setting "Out of Scope" ends automatically as soon as you insert a driver card into card slot 1 or withdraw a driver card from slot.



► Enter Beginning of ferry / train

Select the ferry / train specific condition, when you are about to drive on to the ferry / train or when you have just parked up on the ferry / train.




Ferry / train operation and the VDO Counter*: Please note that the entry for the port operation "drive/movement"* must occur between the beginning of the first and before the end of the second rest period. Otherwise, the daily rest period may not be correctly recognised.


Select the following functions step by step.

1. 
2. 


3. Then set your current activity.

The recording of the port operation is automatically ended as soon as a one-minute driving period has been recorded by the DTCO 1381.

 If a driver card is inserted or removed, the "A" symbol automatically ends.

 The "A" symbol is no longer displayed when the vehicle is moving. The display is shown again however when the vehicle stops before one minute of driving time is recorded by the DTCO 1381.

► Set Local time

-  Read and understand the chapter "Time management" before attempting to make any changes!
 ➔ Refer to "Time management" on page 92.

Select the listed functions step by step.

6

1.

```
entry
A\ vehicle
```
2.

```
A\ vehicle
* local time
```
3.

```
UTC 27.03.2017
23:32 23:32*
23:32 00:02*
23:32 00:32*
```

In the standard display, you may adjust the time to the local time zone as well as to the beginning or end of daylight-savings time in steps of ± 30 minutes.



Please observe the legal stipulations applicable in your country!

► Setting the company local time

A working time counter (referring to the local time of the company) is offered by the DTCO 1381 in order to assist working time calculations for domestic regulations. This information can be requested via the download interface. Select the following menu item to set the company local time:

1.

```
entry
A\ vehicle
```
2.

```
A\ vehicle
0 company time
```
3.

```
UTC 27.03.2017
23:44 01:440
```

In step 3 you can enter date and hour of the company location and the difference from the UTC time.

► Make UTC correction

You can correct the UTC time up to a maximum of ± 1 minute per week. Greater deviations can only be corrected by an authorised workshop.

Select the following functions step by step:

1.


```
entry
A\ vehicle
```
2.

```
A\ vehicle
0: UTC correct.
```
3.

```
0: 23:32UTC
correction +1min.
correction -1min
```



If the deviation of the displayed UTC time is more than 20 minutes, please contact an authorised workshop!

 The menu function is disabled in the following situations:

- A correction has already taken place within the last seven days.
- or
- You are trying to correct the UTC time between one minute before and one minute after midnight.

When selecting, the following note will appear for three seconds.

UTC correct.
impossible!

► Switching on/off the vehicle recording

You can switch on and off the recording of the vehicle position data.

Select the following functions step by step:


1. entry
AV vehicle
2. AV vehicle
P lossins
3. AV vehicle
P lossins on
P lossins off


► Activating additional functions

When entering a licence code you can activate additional functions on the DTCO 1381.

Select the following functions step by step:


1. entry
AV vehicle
2. AV vehicle
\$ licence code
3. \$ licence code
12345678

 If the correct licence code has already been entered, it is displayed accordingly and cannot be changed. In this case, the additional functions are already activated.

 The licence code can be purchased via the VDO Online shop; ➔ see page 123.


■ Main menu display driver 1 / driver 2

From this menu you can display the data of an inserted driver card.



 In the case of ADR variants, switch on the ignition (if required) to be able to use the data display without restrictions.


Information on the display

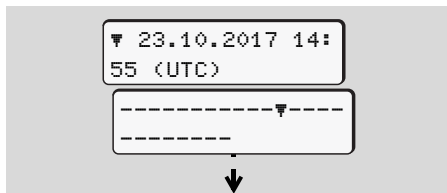The data will appear on the display similar to how it appears on a printout, although one printout line (24 characters) will be shown divided onto two lines.



Example for the data display


If you page backward with the  /  buttons while paging through the information, you will be able to move backward only about 20 printout lines.

Use the  button to leave the display.

Remark


Calling a function is identical to that of a printout and will not be explained separately. There is also a possibility to access any desired display in local time.

You can display all activities of the selected day or the saved or still active events and faults by paging.

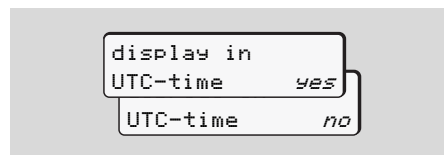


"No" = Display in local time

Select the possible displays for driver 1 or driver 2 step by step.

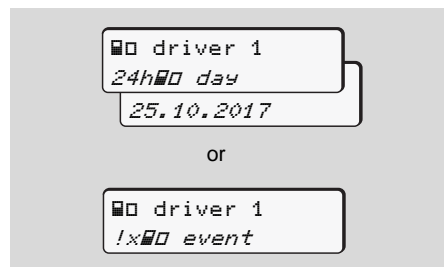


■ Main menu display vehicle

From this main menu you can display data from the data memory.



 In the case of ADR variants, switch on the ignition (if required) to be able to use the data display without restrictions.


Information on the display

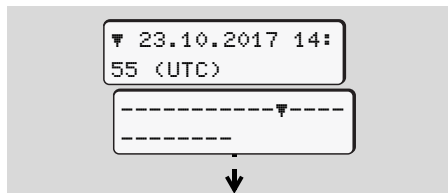The data will appear on the display similar to how it appears on a printout, although one printout line (24 characters) will be shown divided onto two lines.




Example for the data display

If you page backward with the  /  buttons while paging through the information, you will be able to move backward only about 20 printout lines.

Use the  button to leave the display.

Remark

Calling a function is identical to that of a printout and will not be explained separately. There is also a possibility to access any desired display in local time.

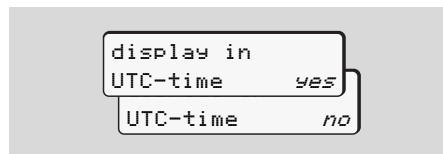

"No" = Display in local time


Select the possible functions step by step.

By paging, you can:

- Display all driver activities in chronological order.
- Display of all saved or still active events and faults.
- Display the instances when the set overspeed was exceeded.
- Display data about vehicle identification, sensor identification, and calibration.

Or

- Display the number of the company card of the registered company. If no company is registered, then "____" will appear.

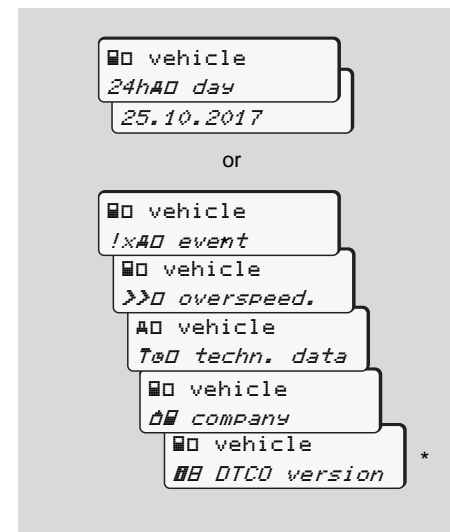

* from Rel. 3.0a (example: SW 03.00.XX)

Messages

A message appears


Overview of the events

Overview of the faults

Driving time warning

Overview of the operational notes

■ A message appears

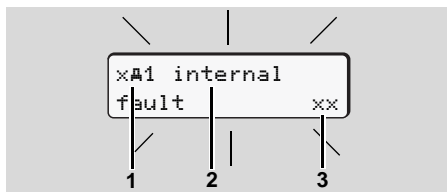

Display of a message

- (1) Pictogram combination, if necessary, with card slot number
- (2) Plain text of the message
- (3) Error code



Risk of Accident

While driving, messages can appear in the display. It is also possible that the driver card will be automatically ejected due to a security breach.

Do not be distracted by this; instead, continue to focus all of your attention on driving safely.

The DTCO 1381 permanently records the driver-based and vehicle-based data and monitors the system's functions. Errors in a component, in the device, or in the operating procedure will be displayed immediately after occurrence and are divided functionally into the following groups:

- ! = Event
- ✕ = Fault
- ⚠ = Driving time warning
- ⓘ = Operational notes

👉 During card-based messages, the card slot number will appear in addition to the pictogram.

► Characteristics of the messages

Events, faults

- The display's backlighting flashes for approximately 30 seconds. At the same time, the cause of the fault appears with a pictogram combination,

plain text of the message, and error code.

- You must acknowledge these messages using button **OK**.
- The DTCO 1381 also saves (in the driver card's data memory) data related to the event or the fault in accordance with the memory regulations contained in the directive. You can display or print this data through the menu function.

Driving time warnings

- This message warns the driver about excessive driving times.
- The message is backlit and must be confirmed by means of button **OK**.

Operational notes

Operational notes are displayed without flashing backlighting and (with the exception of some messages) disappear automatically after 3 or 30 seconds.



Instrument display

If an instrument display is built into the vehicle, the functional monitoring "T" will refer to messages on the DTCO 1381.



For detailed information refer to the vehicle's operating instructions.

► Acknowledgement of messages

1. If you press the button **OK**, the flashing of the backlighting will stop immediately.
2. Press the button **OK** again, the message disappears and the standard display **(a)**, **(b)** or **(c)** will appear again.

Remark

The operational note disappears when pressing the button **OK** for the first time.



If several messages are pending, then you must acknowledge the individual messages one after the other.



If the tachograph fails to operate properly, you (as driver) will be responsible to note information about the activities which will no longer be properly recorded or printed by the tachograph on a separate sheet or on the rear side of the paper roll!

➔ Refer to "Handwritten activity entries" on page 40.

■ Overview of the events

 **If an event repeats on a continuous basis, please contact an authorised workshop.**

<i>Picto / reason</i>	<i>Meaning</i>	<i>Measure</i>
!Ⓜ security breach	<p>The following are possible causes:</p> <ul style="list-style-type: none"> • Error in the data memory, data security in the DTCO 1381 is no longer ensured. • The data from the sensor are no longer reliable. • The DTCO 1381 housing was opened without authorisation. 	Acknowledge message.
!Ⓜ1 security breach	<ul style="list-style-type: none"> • The card lock is disturbed or defective. • The DTCO 1381 no longer detects a tachograph card that was previously inserted correctly. • The identity or authenticity of the tachograph card is not proper or the data recorded on the tachograph card is not reliable. 	<p>Acknowledge message.</p> <p>If the DTCO 1381 recognises security breaches which do no longer ensure the correctness of the data on the tachograph card, the tachograph card is automatically ejected (even while the vehicle is moving)! Insert tachograph card once again or have it checked if necessary.</p>
!⚡ power interruption	<p>The power was disconnected or the power supplied to the DTCO 1381 / sensor was too low or too high. Under certain conditions this message can also appear when the engine starts!</p>	<p>Acknowledge message.</p> <p>➡ Refer to “Power interruption” on page 21.</p>
!Ⓜ sensor fault	<p>The communication with the sensor is interrupted.</p>	Acknowledge message.
!Ⓜ motion conflict	<p>Contradiction in the evaluation of the vehicle movement between sensor and an independent signal source. Perhaps the function (ferry/train) was not set during the transport.</p>	<p>Acknowledge message.</p> <p>Contact an authorised workshop as soon as possible.</p>

7

Picto / reason	Meaning	Measure
!0 driving without card	Driving commenced without a driver card or without a valid driver card in card slot 1. The message also appears if a non-permissible card combination is caused by inserting the card before or while the vehicle is moving; ➔ Refer to "Operating modes of the DTCO 1381" on page 88.	Acknowledge message. Stop vehicle and insert valid driver card. Withdraw a possibly inserted company card / control card from the DTCO 1381.
!01 insertion while driving	The driver card was inserted after driving has begun.	Acknowledge message.
!001 time overlap	The set UTC time of this tachograph is behind the UTC time of the previous tachograph. This produces a negative time difference.	Acknowledge message. Determine the tachograph with the incorrect UTC time and make sure that an authorised workshop checks and corrects the tachograph as soon as possible.
!1 card not valid	The tachograph card has either expired, is not yet valid, or the authentication has failed. An inserted driver card which has become invalid after a change of day will be automatically written to and ejected (without request) after the vehicle becomes stationary.	Acknowledge message. Check tachograph card and insert it again.
! cards conflict	The two tachograph cards must not be inserted together in the DTCO 1381! For example, the company card is inserted together with a control card.	Acknowledge message. Remove the corresponding tachograph card from the card slot.
!A1 card not closed	The driver card was not properly removed from the last tachograph. In some cases driver-based data will not be saved.	Acknowledge message.
>> overspeed	The set maximum speed was exceeded for longer than 60 seconds.	Acknowledge message. Reduce speed.

■ Overview of the faults



If a fault repeats on a continuous basis, please contact an authorised workshop.

<i>Picto / reason</i>	<i>Meaning</i>	<i>Measure</i>
xA internal fault	Serious fault in the DTCO 1381, the following are possible causes:	Acknowledge message.
	<ul style="list-style-type: none"> • Unexpected program faults or processing time faults. 	Check proper function of the button elements.
	<ul style="list-style-type: none"> • Button elements blocked or pressed simultaneously for some time. 	Check connecting cables or function of the external devices.
	<ul style="list-style-type: none"> • Communication fault with external devices. 	Check connecting cables or function of the instrument display.
	<ul style="list-style-type: none"> • Communication fault with the instrument display. 	Check connecting cables or function of the connected control device.
xA1 internal fault	<ul style="list-style-type: none"> • Fault in the card mechanics, e.g. card lock is not closed. 	Remove tachograph card and insert it again.
xA time fault	UTC time of the DTCO 1381 is not plausible or does not function properly. In order to avoid an inconsistency of data, newly inserted driver / company cards are not accepted!	Acknowledge message.
x printer fault	The printer's supply voltage has failed or the temperature sensor for the printing head is defective.	Acknowledge message. Repeat the process and, if necessary, switch off / on the ignition again.

Picto / reason	Meaning	Measure
x↓ download fault	Fault while downloading the data to an external device.	Acknowledge message. Repeat the data download once again. Check connecting cables (e.g. loose contact) or external device.
x1 sensor fault	The sensor has indicated an internal fault after a self-test.	Acknowledge message.
x1 card fault	A communication fault has appeared while reading / writing the tachograph card, e.g. by dirty contacts.	Acknowledge message. Clean the contacts of the tachograph card and insert it again.
x2 card fault	It might not be possible to record the data completely on the driver card!	➡ Refer to "Disposal of the components" on page 93.

■ Driving time warnings

<i>Picto / reason</i>	<i>Meaning</i>	<i>Measure</i>
! break! 1e04h15 00h15	This message appears after an uninterrupted driving time of 4 hours 15 minutes.	Acknowledge message. Please plan a rest break soon.
! break! 1e04h30 00h15	Driving time exceeded! This message appears after an uninterrupted driving time of 4 hours 30 minutes.	Acknowledge message. Please take a rest break.




Please note!

The DTCO 1381 registers, saves and calculates the driving times on the basis of the rules established by the EU regulations. It warns the driver prematurely about exceeding his driving time!

However, these cumulative driving times do not anticipate the legal interpretation of "continuous driving time".






► VDO Counter * display

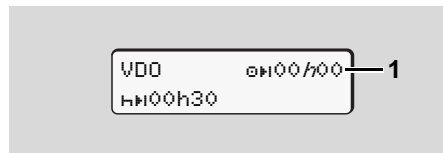






After having acknowledged the second "Driving time warning", the VDO Counter * displays your driving time (1) has ended (except for Out of Scope operation).

Please take a rest break at once.

■ Overview of the operational notes

<i>Picto / reason</i>	<i>Meaning</i>	<i>Measure</i>
 please enter	This request will appear if no entry is made during the manual entry procedure.	Press button  and continue the entry.
 printout not possible	A printout is not possible at the moment: <ul style="list-style-type: none"> • for ADR variants, the ignition has been switched off (if required). • because the temperature of the thermal printing head is too high, • the printer interface is occupied by another active process, e.g. a printout in progress, • or because the supply voltage is too high or too low. 	You can request a printout as soon as the problem is removed.
 printout delayed	An ongoing printout is interrupted or delayed because the temperature of the thermal printing head is too high.	Switch on ignition and call the desired display again. Wait to cool. The printout will continue automatically as soon as the permissible condition has been reached.
 no paper	The printer has no paper or the printer drawer is not correctly closed. The printout request will be rejected and/or a printout in progress will be interrupted.	<ul style="list-style-type: none"> • Insert new paper roll. • Close printer drawer correctly. A cancelled printing must be started again via the menu function..






<i>Picto / reason</i>	<i>Meaning</i>	<i>Measure</i>
 ejection not possible	Requesting the tachograph card will be rejected: <ul style="list-style-type: none"> because data might be read in or transferred, the driver card needs to be read-in again within the registration time of one minute, a day change (according to UTC time) is taking place, the vehicle is moving, or, for an ADR variant, the ignition has been switched off (if required). 	Wait until the DTCO 1381 enables the function or remove the problem: Stop the vehicle or switch on the ignition. Then request the tachograph card again.
 recordings inconsistent	There is an inconsistency in the order of the dates in the data recorded on the driver card.	This message can be displayed until the incorrect recordings have been overwritten by new data! Have the tachograph card checked if the message is displayed permanently.
 please eject the card	An error occurred when writing data to the driver card.	While the card is ejected, a new attempt is made to communicate with the card. If this attempt fails too, a printout of the activities last saved for this card is automatically started.
 card error	An error has occurred when processing the inserted tachograph card. The tachograph card is not accepted and is ejected.	Clean the contacts of the tachograph card and insert it again. If this message is displayed again, check whether another tachograph card can be read in correctly.
 wrong card type	The inserted card is not a tachograph card. The card is not accepted and is ejected.	Please insert a valid tachograph card.

Picto / reason	Meaning	Measure
⚠️ internal fault	Fault in the card mechanics, e.g. card lock is not closed.	Remove tachograph card and insert it again.
⚠️ internal fault	<ul style="list-style-type: none"> • Fault at pulse output. 	Check connecting cables or function of the connected control device.
⚠️ internal fault	<ul style="list-style-type: none"> • The DTCO 1381 has a serious fault or a serious time error has occurred. For example, an unrealistic UTC time. The tachograph card is not accepted and is ejected. 	<p>Take care that an authorised workshop checks and, if necessary, replaces the tachograph as soon as possible.</p> <p>Please observe the listed note if the tachograph does not operate properly, ➡ see page 75.</p>



Operational notes as information

<i>Picto / Reason</i>	<i>Meaning</i>	<i>Measure</i>
■ no data!	The menu function cannot be called up since, in the card slot, ... <ul style="list-style-type: none"> • no driver card is inserted • or a company card / control card is inserted. 	These notes disappear automatically after three seconds. No steps must be taken.
⊗ UTC correct. impossible!	It is not possible to use the menu function: <ul style="list-style-type: none"> • The UTC time has already been corrected within the last seven days. • You are trying to correct the UTC time between one minute before and one minute after midnight. 	
printout started ...	Acknowledgement of the selected function.	
entry stored	Acknowledgement that the DTCO 1381 saved the entry.	
display not possible!	No data can be displayed as long as the printing is in progress.	
please wait!	The tachograph card has not yet been read completely. It is not possible to call up menu functions.	

Picto / Reason	Meaning	Measure
 Calibration in days 18	The next periodic inspection is due, for example in 18 days. Inspections required due to technical alterations cannot be taken into account! An authorised workshop can program when the notice should start to appear. ➔ <i>For more details, see “Compulsory Tachograph inspections” from page 93.</i>	These notes disappear automatically after three seconds. No steps must be taken.
 Expires in days 15	The released tachograph card, for example, expires in 15 days! An authorised workshop can program the day as of which the notice should appear.	
 Download in days 7	The next download of the driver card will, for example, be due in 7 days (default setting). An authorised workshop can program when the notice should start to appear.	

Product description

Operating modes of the DTCO 1381

Tachograph cards


Saved data

Time management

Care and maintenance

Technical data

■ Operating modes of the DTCO 1381

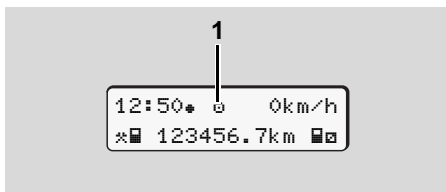

The DTCO 1381 has four operating modes:

- Operational "O"
- Company "C"
- Control "K"
- Calibration "T"

According to the inserted tachograph card(s), the DTCO 1381 automatically changes to the following operating mode:

(1) Display of the operating mode

Operating modes		Card slot -1				
		No card	Driver card	Company card	Control card	Workshop card
Card slot -2	No card	Operational	Operational	Company	Control	Calibration
	Driver card	Operational	Operational	Company	Control	Calibration
	Company card	Company	Company	Company	Operational	Operational
	Control card	Control	Control	Operational	Control	Operational
	Workshop card	Calibration	Calibration	Operational	Operational	Calibration

In this condition, the DTCO 1381 only uses the tachograph card inserted in card slot 1.

■ Tachograph cards

The authorities in the individual EU member states will issue the tachograph cards specified by the legislature.

▶ Driver card

The driver uses the driver card to identify himself to the DTTCO 1381. The driver card is used for normal driving operation and permits storing, displaying, printing, or downloading (with only one inserted driver card) of activities under this identity.

▶ Company card

The company card identifies a company and authorises access to the data of this company. With the company card, the data saved in the data memory of the Vehicle Unit as well as in the inserted driver card can be displayed, printed, and downloaded. If necessary (once per unit), the entry of the authorising member state and the official registration number in the DTTCO 1381.

It is also possible to download load data remotely with the corresponding fleet management system. This company card

is intended for the owners and operators of vehicles.

▶ Control card

The control card identifies an official of a control body (like the police) and permits access to the data in the data memory. All saved data and the data of an inserted driver card are accessible. This data can be displayed, printed, or downloaded through the download interface.

▶ Workshop card

Persons of an authorised workshop who are approved to program, calibrate, activate, test, etc. will receive the workshop card.

▶ Locking the tachograph cards

If the DTTCO 1381 accepts an inserted tachograph card, removal of the card will be mechanically blocked. It is possible to remove the tachograph card only when:

- the vehicle is stationary,
- the user requests removal,

- after the data defined by the regulations has been saved on the tachograph card.

Automatic ejection

If the DTTCO 1381 recognises a fault in the card communication, it tries to transfer the existing data to the tachograph card.

The driver is informed about the fault by the message "Eject card" and is requested to withdraw the driver card.

A printout of the activities last saved for the driver card is carried out automatically.

➔ *Details refer to "Communication error" on page 22..*

► Access rights of the tachograph cards

The rights to access data saved in the data memory of the DTCO 1381 are regulated by law and will be released with the corresponding tachograph card only.

		Without card	Driver card	Company card	Control card	Workshop card
Print	Driver data	X	V	V	V	V
	Vehicle data	T1	T2	T3	V	V
	Parameter data	V	V	V	V	V
Displays	Driver data	X	V	V	V	V
	Vehicle data	T1	T2	T3	V	V
	Parameter data	V	V	V	V	V
Read out	Driver data	X	T2	V	V	V
	Vehicle data	X	X	T3	V	V
	Parameter data	X	X	V	V	V

Driver data = Data on the driver card
 Vehicle data = Data in the data memory
 Parameter data = Data for device adaptation / Calibration

V = Unlimited access rights
 T1 = Driver activities of the last eight days without driver identification data
 T2 = Driver identification only for the inserted card
 T3 = The associated company's driver activities
 X = not possible

■ Saved data

► Driver card

- Data for identifying the driver.

After any use of the vehicle the following data:

- Vehicles used
- Activities of the driver, during normal driving operation at least 28 days.
- Country entries
- Appearing events / faults
- Information about control activities
- Specific conditions including Out of Scope and ferry / train operations

If the memory capacity is full, the oldest data will be overwritten by the DTCO 1381.

► Company card

- Identifies a company and authorises access to the data of this company.

The following data regarding company activities:

- Type of activity
 - Lock-in / lock-out

- Downloading the data from the data memory
- Downloading the data from the driver card

- Period of time (from / to) for which the data was downloaded.
- Vehicle ID
- Driver Card number and card issuing Member State (when downloading a Driver Card)

► Data memory

- The data memory records and saves the data required according to the Council Regulation (EEC) 3821/85, annex I B, over a time period of at least 365 calendar days:
- The evaluation of activities occurs in 1 calendar minute intervals and the DTCO 1381 will evaluate the longest continuous activity for each interval.
- The DTCO 1381 can save approx. 168 hours of speed values in a resolution of one second. Each second of the

values are thus saved exactly with date and time.

- Saved speed values with a higher resolution (one minute before and one minute after an unusual deceleration) can be analysed in the event of a collision.

These data can be read via the download interface:


- legal download 24 hours,
- the complete mass memory by means of special download software.

► VDO GeoLoc *

The recording of position and vehicle data is possible as an option. ➔ *Refer to "VDO GeoLoc ** on page 18.*

■ Time management

The DTCO 1381 saves all time entries for working time, availability time, driving time, rest time, etc. in UTC time.

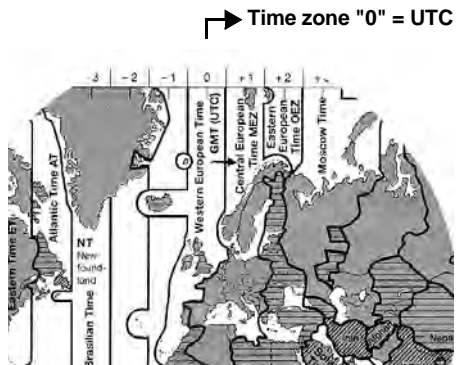

Time zone in Europe

8 UTC time corresponds to time zone "0" of the 24 time zones (-12 ... 0 ... +12) distributed across the globe.

In principle, the time shown in the display is set at the factory in UTC time. You can set the local time through the menu function.

➔ Refer to "Set Local time" on page 68.

<i>Time zone offset</i>	<i>Countries</i>
00:00 (UTC)	UK / P / IRL / IS
+ 01:00 h	A / B / BIH / CZ / D / DK / E / F / H / HR / I / L / M / N / NL / PL / S / SK / SLO / SRB
+ 02:00 h	BG / CY / EST / FIN / GR / LT / LV / RO / TR / UA
+ 03:00 h	RUS

▶ Converting to UTC time

UTC time = Local time – (ZO + SO)

ZO = Time zone offset

SO = Daylight-savings time offset

(this offset is not used after daylight-savings time ends)

(ZO + SO) = set offset in the DTCO 1381

Example:

Local time in Germany = 15:30
(daylight-savings time)

UTC time = Local time – (ZO + SO)
= 15:30 –
(01:00 h + 01:00 h)

UTC time = 13:30 Time

■ Care and maintenance

► Cleaning the DTCO 1381

Clean the casing, the display and the function keys with a slightly moistened cloth or with a microfibre cleaning cloth.



Do not use any abrasive cleaning agents or solvents like thinner or petroleum spirits.

► Compulsory Tachograph inspections

Preventive maintenance work is not required for the DTCO 1381. At least every two years, the proper operation of the DTCO 1381 must be checked by an authorised workshop.

Follow-up inspections are necessary if

- changes were made to the vehicle, e.g. concerning the distance pulse or the wheel circumference,
- a repair was made to the DTCO 1381,
- the vehicle registration number of the vehicle has been changed,

- the UTC time deviates by more than 20 minutes.



Make sure that the calibration plaque is renewed during every 2 year inspection and contains the required data.

► Behaviour when repairing / replacing the DTCO 1381

The authorised workshops can download the data from the DTCO 1381 and hand them over to the company.

If, due to a failure, the saved data cannot be downloaded, the workshops are instructed to document this with a certificate and to contact the company in writing.



Archive the data or carefully keep the documentation for possible requests by control bodies.

► Disposal of the components




Please dispose of the DTCO 1381 with its associated system components in compliance with the guidelines for disposing EC recording equipment effective in the respective member states.

■ **Technical data**

► **DTCO 1381**

Measurement range end value	220 km/h (according to annex I B) 250 km/h (for other vehicle deployments)
LCD	2 lines with 16 characters each
Temperature	Operation: -20 to 70 °C Operation ADR: -20 to 65 °C Storage: -20 to 75 °C
Voltage	24 or 12 Volt DC
Weight	600 g (+/- 50 g)
Power supply	Standby: during operation: max. 30 mA (12 V) max. 5,0 A (12 V) max. 20 mA (24 V) max. 4,2 A (24 V)
EMV / EMC	ECE R10
Thermal printing mechanism	Character size: 2,1 x 1,5 mm Print width: 24 characters/line Speed: appr. 15-30 mm/sec. Printout of diagrams
Protection type	IP 54
Possible special equipment	<ul style="list-style-type: none"> • ADR variants • Customer-specific panel, illumination of display and buttons • Automatic setting of the activities after ignition on/off • Printout and download of v-/n profiles, status entry D1/D2 • VDO Counter, VDO GeoLoc

► **Paper roll**

Ambient conditions	Temperature: -25 to 70 °C
Dimensions	Diameter: approx. 27.5 mm Width: 56,5 mm Length: approx. 8 m
Order no.	1381.90030300 You will receive original spare paper rolls from your local VDO distributor.
<p> Please note!</p> <p>Use (order) only paper rolls (original VDO printer paper) on which is visible the tachograph model (DTCO 1381) with approval mark "E184" and the valid approval mark "E174" or "E189".</p>	

Pictograms and printout samples

Overview of the pictograms

Country symbols

Printout examples

Explanation of printout examples

Data record purpose during events or faults

■ Overview of the pictograms

Operating modes	
🏢	Company
🔧	Control
⚙️	Operational
⚖️	Calibration
📅	Production status

Persons	
🏢	Company
🔧	Controller
👤	Driver
🏠	Workshop / inspection centre
🏭	Manufacturer

Activities	
🕒	Availability time
⌚	Driving time
🛑	Break and rest time
⌚	Other working time
⏸️	Valid interruption / break
❓	Unknown

Devices / functions	
1	Card slot 1; Driver 1
2	Card slot 2; Driver 2
📄	Tachograph card (read correctly)
—	Tachograph card inserted; relevant data read.
🕒	Clock
🖨️	Printer / printout
🚪	Entry
📺	Display
📍	Recording of Position and vehicle data is switched on (e.g. VDO GeoLoc *).
📄	Licence code
📄	External saving Download data (copy)
📡	Data transmission running
📡	Sensor
🚗	Vehicle / Vehicle unit / DTCO 1381
🛞	Tyre size
⚡	Power supply
📄	Remote entries

Miscellaneous	
!	Event
✖️	Fault
📄	Operational note / Work time warnings
🕒	Shift beginning
📍	Location
🔒	Security
➤	Speed
🕒	Time
Σ	Total / summary
🕒	Shift end
📄	Manual entry of driver activities

Specific conditions	
OUT	Recording equipment not required
🚢	Vehicle located on a ferry or on a train

Qualifiers	
24h	Daily
I	Weekly
II	Two weeks
➔	From or to

► Pictogram combinations

Miscellaneous	
	Control location
	Start time
	End time
	Begin Out of Scope: Recording equipment not required
	End Out of Scope
	Location at beginning of work day (shift beginning)
	Location at end of work day (shift end)
	From vehicle
	Printout driver card
	Printout vehicle / DTCO 1381
	Entry vehicle / DTCO 1381
	Display driver card
	Display vehicle / DTCO 1381
	Local time
	Company time
	UTC correction
	DTCO version

Cards	
	Driver card
	Company card
	Control card
	Workshop card
	No card

Driving	
	Crew
	Driving time over two weeks

Printouts	
	Daily driver activities (daily value) from the driver card
	Events and faults from the driver card
	Daily driver activities (daily value) from DTCO 1381
	Events and faults from DTCO 1381
	Over-speeding
	Technical data
	Driver's activities
	Periods with activated remote control

	v-diagram
	Status D1/D2 diagram *
	Speed profiles *
	Rpm profiles *
	Sensor information
	Security information

Displays	
	Daily driver activities (daily value) from the driver card
	Events and faults from the driver card
	Daily driver activities (daily value) from vehicle / DTCO 1381
	Events and faults from vehicle / DTCO 1381
	Over-speeding
	Technical data
	Company

Events	
!	Insertion of an invalid tachograph card
!	Time overlap
!	Insertion of driver card while driving
>>	Over-speeding
!	Communication fault with the sensor
!	Time adjustment (by workshop)
!	Cards conflict
!	Driving without valid driver card
!	Last card process not completed correctly
!	Interruption of power supply
!	Security breach
>	Over-speeding control
!	Vehicle motion conflict

Faults	
×	Card fault
×	Display fault
×	Printer fault
×	Internal fault DTCO 1381
×	Download fault
×	Sensor fault

Driving time warnings

	break!
--	--------

Manual entry process

	Entering "activities"
?	Entering "unknown activity"
	Entering "location" at the end of the shift
	Entering "location" at the beginning of the shift

Operational notes

	Wrong entry
	Menu access not possible
	Please enter
	Printout not possible
	No paper

	Printout delayed
	Card defective
	Eject the card
	Incorrect card
	Ejection not possible
	Process delayed
	Recording inconsistent
	Internal fault
	Expires in days ...
	Calibration in days ...
	Download of driver card in days ...

VDO Counter *

	Remaining driving time
	Beginning of the next driving time
	Future driving time
	Remaining break time / rest period
	Remaining time until the beginning of the daily, weekly rest period

■ Country symbols

Value assignment	
Å	Austria
ÅL	Albania
AND	Andorra
ARM	Armenia
ÅZ	Azerbaijan
B	Belgium
BG	Bulgaria
BIH	Bosnia and Herzegovina
BY	Belarus
CH	Switzerland
CY	Cyprus
CZ	The Czech Republic
D	Germany
DK	Denmark
E	Spain ¹⁾
EC	European Community
EST	Estonia
EUR	Rest of Europe
F	France
FIN	Finland
FL	Liechtenstein

FR/FO	Faroes
GE	Georgia
GR	Greece
H	Hungary
HR	Croatia
I	Italy
IRL	Ireland
IS	Iceland
KZ	Kazachstan
L	Luxembourg
LT	Lithuania
LV	Latvia
M	Malta
MC	Monaco
MD	Republic of Moldavia
MK	Macedonia
MNE	Montenegro
N	Norway
NL	The Netherlands
P	Portugal
PL	Poland
RO	Romania


RSM	San Marino
RUS	The Russian Federation
S	Sweden
SK	Slovakia
SLO	Slovenia
SRB	Serbia
TM	Turkmenistan
TR	Turkey
UA	Ukraine
UK	United Kingdom, Alderney, Guernsey, Jersey, Isle of Man, Gibraltar
UZ	Uzbekistan
V	Vatican City
WLD	Rest of the world

1) ➔ Refer to “Symbols of the regions” on page 100.

► Symbols of the regions

Value assignment – Spain

AN	Andalusia
AR	Aragon
AST	Asturias
C	Cantabria
CAT	Catalonia
CL	Castile-León
CM	Castile-La Mancha
CV	Valencia
EXT	Extremadura
G	Galicia
IB	Balearic islands
IC	Canary islands
LR	La Rioja
M	Madrid
MU	Murcia
NA	Navarra
PV	Basque Community

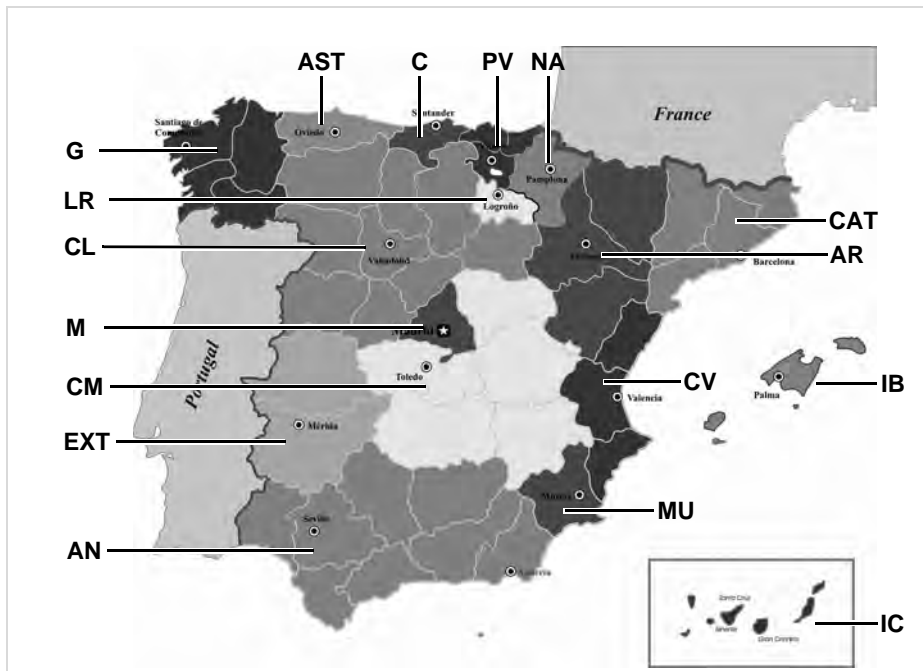

■ Printout examples

► Daily printout from the driver card

The image shows three printout samples from a driver card, with numbered callouts (1-22) pointing to specific data fields. The printouts are arranged in three columns. The first column shows a full printout with callouts 1 through 8b. The second and third columns show partial printouts with callouts 8c through 11a and 11c through 22 respectively. The printouts contain various data including dates, times, distances, and company information.

Printout 1 (Left):

- 1: 26.11.2017 14:55 (UTC)
- 2: 24h
- 3: Schmitt Peter
- 3a: /12345678901234 5 6
- 4: ABC12345678901234 D /VS VM 612
- 5: Continental Automotive Technologies 1381.12345678901
- 6: NFZ-Profi Service & Vertrieb /87654321087654 3 2 02.04.2016
- 7: /12345678901234 5 6 11.11.2017 11:11
- 8: 25.11.2017 310
- 8a: ? 00:00 06h00 06:00 00h17
- 8b: A D /VS VM 612 95 872 km




Printout 2 (Middle):

- 8c: * 06:17 00h45 07:02 00h39 00 07:41 01h19 00 95 958 km 86 km
- 8e: ? 09:00 00h24
- 8a: A S /LCR 243 205 002 km
- 8b: 09:24 02h30 00 11:54 00h39
- 8c: ? 12:33 00h10
- 8a: 12:43 02h27 15:10 01h12 16:22 00h16 16:38 00h42 16:38
- 8d: 17:20 00h52 18:12 00h24 18:36 00h02 205 408 km 231 km
- 8e: ? 18:38 05h22
- 8a: 11:06:00 D 95 872 km 11:09:00 D 95 958 km 11:09:24 D 205 002 km 11:12:33 D 205 177 km 11:12:43 D 205 177 km



Printout 3 (Right):

- 11d: 18:38 CH 205 408 km 04h54 317 km 02h27 03h29 01h14 ? 11h56 00 04h28
- 12: 10.11.2017 12:45 00h04 A D /VS VM 612
- 12c: 05.08.2017 09:23 !34 (0) 00h01 A D /VS VM 612
- 13: A D /VS VM 612 15.11.2017 16:42 (2) 00h12 98765432109876 5 4 /12345678901234 5 6
- 13c: 4 15.10.2017 11:10 (95) 00h30 45678901234567 7 8 /12345678901234 5 6 10.11.2017 12:45 00h04 45678901234567 7 8
- 22: Friedrichshafen Schmitt Peter Roseng Winfried

Points to note with "Daily printout of the driver card"

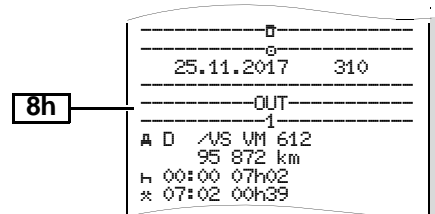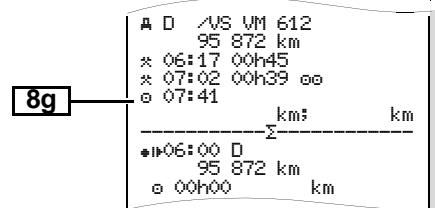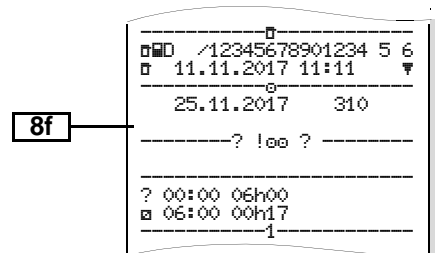

► Events / faults from the driver card

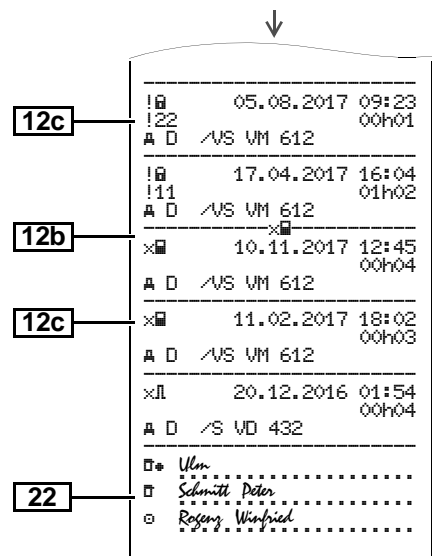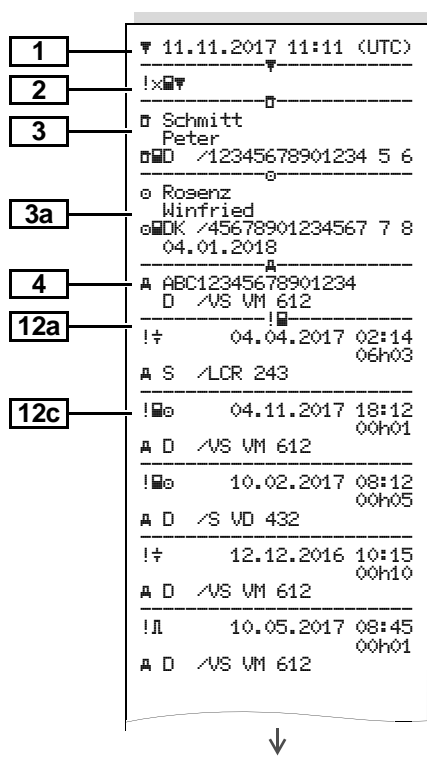

► Daily printout of the vehicle

1	▼ 27.11.2017 16:55 (UTC)
2	24hA▼
3	□ Schmitt Peter
	□ID /12345678901234 5 6
4	A ABC12345678901234
5	D /VS VM 612
	□
6	□ Continental Automotive Technologies 1381.12345678901
	↑
7	T NFZ-Profi Service & Ve rtrieb
	↑
8	TID /87654321087654 3 2
9	T 02.04.2016
	□
10	□ID /12345678901234 5 6
	□ 11.11.2017 11:11 □▼
	○
	25.11.2017
	95 872 - 96 284 km
10a	-----1
	□
	95 872 km
10b	H 00:00 06h17
	95 872 km 0 km
	□
10c	○ Rosenz Winfried
	□DK /45678901234567 7 8
	04.01.2018
10d	A+S /LCR 243
	24.11.2017 18:54
	95 872 km M

10e	* 06:17 00h45
	* 07:02 00h39 ○○
10g	○ 07:41 01h19 ○○
	95 958 km? 86 km
	□
10a	□
	95 958 km
	* 09:00 00h05
	95 958 km? 0 km
	□
10b	○ Mustermann Heinz-Dieter
	□F /12345678901234 5 6
	16.06.2017
10c	A+D /M MS 680
	24.11.2015 18:54
10d	95 958 km
	* 09:05 00h25
	* 09:30 02h55
10f	□ 12:25 01h18
	12:25
	○ 13:43 00h03
10e	* 13:46 00h02 ○○
	* 13:48 00h45 ○○
	* 14:33 00h35 ○○
10g	H 15:08 01h02 ○○
	96 206 km? 248 km
	□
	96 206 km
	H 16:10 00h20
	96 206 km? 0 km
	□
	○ Anton Max
	□A /56789567895678 9 5
	25.10.2017

	A+D /VS VM 612
	25.11.2017 16:30
	96 206 km
	○ 16:30 00h56
	* 17:26 01h11
	96 274 km? 68 km
	□
	96 274 km
10a	* 18:37 00h23
	○ 19:00 00h21
	H 19:21 04h39
	96 284 km? 10 km
10h	-----2
	□
	95 872 km
10a	H 00:00 07h02
	H 00:00 07h02
	Σ
11	1e□
	○ 00h21 10 km
11b	* 00h28 □ 00h00
	H 11h16
11c	2e□
	* 00h00 □ 12h16
	H 07h02
	□
11e	○ Rosenz Winfried
	□DK /45678901234567 7 8
	H*09:00 D
	95 958 km
	○ 01h19 86 km
	* 01h24 □ 00h00
	H 00h00
	○ 01h58

↓

13 !xA
!e 1 25.11.2017 19:01
(1) 00:20

13c >> 5 15.11.2017 16:42
(2) 00h12
e /98765432109876 5 4
e /12345678901234 5 6

x 0 10.11.2017 12:45
00h04
e /45678901234567 7 8

21 -----iRv-----
e+ 17.11.2017 14:34
+e 17.11.2017 15:29

22 P* Linden
P Schmitt Peter
e+
+e
e

Points to note with "Daily printout of the vehicle"

10i -----1-----
-----OUT-----
e Rosenz
Winfried
e /45678901234567 7 8
04.01.2018
A+S /LCR 243

► Events / faults from the vehicle

1 ▼ 24.10.2017 16:07 (UTC)
▼

2 !xA

3 P Schmitt
Peter
e /12345678901234 5 6

4 A ABC12345678901234
D /VS VM 612

13a !A
!e 0 10.08.2017 08:12
(0) 00h01
e /12345678901234 5 6
e /12345678901234 5 6

13c !e 0 10.08.2017 08:20
(0) 00h03
e /12345678901234 5 6
e /12345678901234 5 6

!e 1 15.10.2017 07:02
(1) 00h54

!e 2 15.10.2017 07:02
(1) 00h54

!e 3 15.03.2016 07:56
(1) 00h01
e /12345678901234 5 6
e /22335578901234 1 2

>> 4 15.10.2017 11:10
(95) 00h30
e /45678901234567 7 8
e /12345678901234 5 6

↓

↓

13b !e 0 17.04.2017 16:04
!17 (0) 01h02
e /45678901234567 7 8
e /12345678901234 5 6
T /54321987654321 9 8

!e 0 05.08.2017 09:23
(0) 00h01
e /45678901234567 7 8

13c x 0 10.08.2017 07:00
00h02
e /12341234123412 3 4

13c x 0 05.05.2016 07:15
00h14
e /12345678901234 5 6
e /12345678901234 5 6


x 6 05.05.2016 07:15
00h14
e /12345678901234 5 6
e /12345678901234 5 6

x 0 12.09.2017 21:00
00h01


x 0 02.06.2017 21:00
00h30
e /12341234123412 3 4

22 P* Linden
P Schmitt Peter
e


► Driver's activities

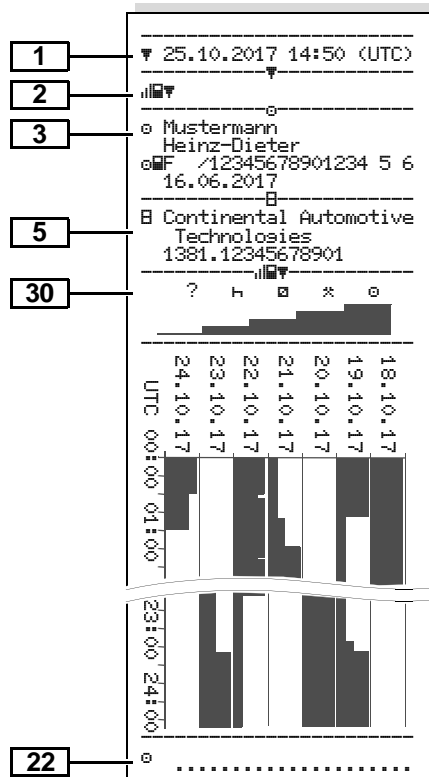

► v-diagram

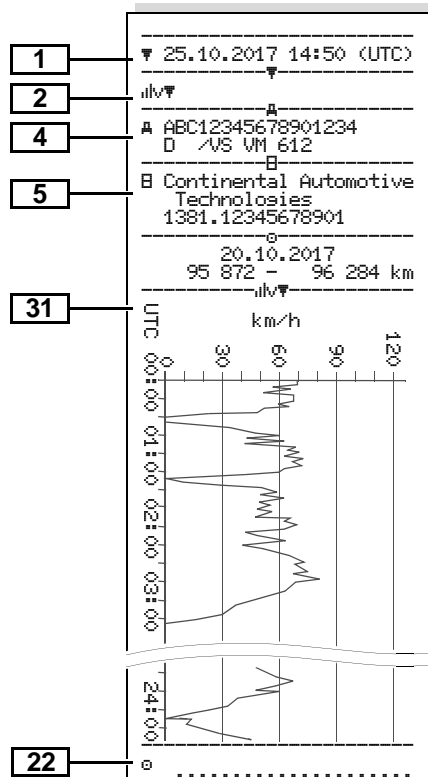

► Status D1/D2 diagram *

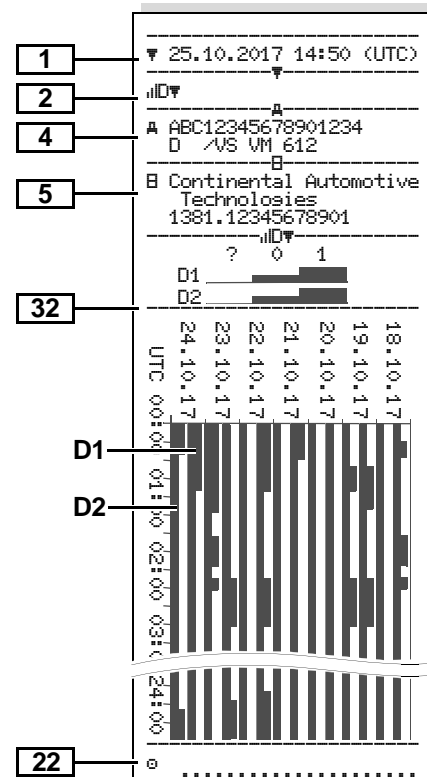

► Speed profiles *

1 ▼ 27.11.2017 17:05 (UTC)

2 %v▼

3 ⚠ Spedition Mustermüller
 📄 /12341234123412 3 4

4 A ABC12345678901234
 D /VS VM 612

○

25.11.2017 00:00
 25.11.2017 06:17
 --- km/h

112 <=v< 221 00h00

23 ○ Mustermann
 Heinz-Dieter
 25.11.2017 18:37
 26.11.2017 00:00
 --- km/h

0	<=v<	1	05h02
1	<=v<	10	00h01
10	<=v<	16	00h02
16	<=v<	24	00h04
24	<=v<	32	00h05
32	<=v<	40	00h05
40	<=v<	48	00h04
48	<=v<	56	00h00
56	<=v<	64	00h00
64	<=v<	72	00h00
72	<=v<	80	00h00
80	<=v<	88	00h00
88	<=v<	96	00h00
96	<=v<	104	00h00
104	<=v<	112	00h00
112	<=v<	221	00h00

24

22 ○

► Rpm profiles *

1 ▼ 27.11.2017 17:05 (UTC)

2 %n▼

3 ⚠ Spedition Mustermüller
 📄 /12341234123412 3 4

4 A ABC12345678901234
 D /VS VM 612

○

25.11.2017 00:00
 25.11.2017 06:17
 --- rpm

3281 <=n< * 00h00

23 ○ Mustermann
 Heinz-Dieter
 25.11.2017 18:37
 26.11.2017 00:00
 --- rpm

0	<=n<	1	05h02
1	<=n<	234	00h00
234	<=n<	469	00h00
469	<=n<	703	00h00
703	<=n<	938	00h00
938	<=n<	1172	00h00
1172	<=n<	1406	00h03
1406	<=n<	1641	00h03
1641	<=n<	1875	00h04
1875	<=n<	2109	00h09
2109	<=n<	2344	00h02
2344	<=n<	2578	00h00
2578	<=n<	2812	00h00
2812	<=n<	3047	00h00
3047	<=n<	3281	00h00
3281	<=n<	*	00h00

25

22 ○

► Printout in local time

33 -----
 !!! No local printout!!!

34 ⚠+ 25.11.2017 01:00
 ⚠+ 26.11.2017 01:00
 UTC +01h00

35 ▼ 26.11.2017 15:55 (LOC)

36 24h▼

○

○ Rosenz
 Winfried
 📄 /45678901234567 7 8
 04.01.2018


A ABC12345678901234
 D /VS VM 612


B Continental Automotive
 Technologies
 1381.12345678901

T NFZ-Profi Service & Ve
 rtrieb
 T📄 /87654321087654 3 2
 T 02.04.2016

📄 /12345678901234 5 6
 📄 11.11.2017 12:11 ▼

■ Explanations of printout examples

 On request, a company-specific logo can be applied to the printout.

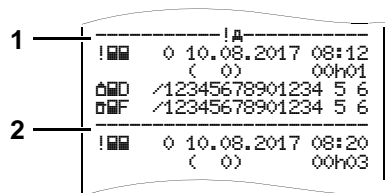

Every printout consists of a string of different data blocks that are identified by block identifiers **(1)**.

A data block contains one or several data records that are identified by means of a data record identifier **(2)**.

A data record identifier will not be printed immediately after a block identifier!

► Legend of the data blocks

1	Date and time of the printout in UTC time
2	Type of printout: 24h = Daily printout of the driver card !x = Events / faults from the driver card 24hA = Daily printout from the DTCO 1381 !xA = Events / faults from the DTCO 1381 >> = Over-speeding The set value of the legally permitted maximum speed set is also printed. T = Technical data ! = Driver's activities !v = v-diagram Optional printouts: !D = Status D1/D2 diagram * %v = Speed profiles * %n = Rpm profiles *

3	Information about the cardholder of the inserted tachograph card: = Controller = Driver = Company = Workshop / inspection centre <ul style="list-style-type: none"> • Last name • First name • Card identification • Card valid until ... If tachograph cards are not associated with a person, the name of the control body, the company, or the workshop will be printed instead of the person's name.
3a	Information about the cardholder of the other tachograph card
4	Vehicle identification: <ul style="list-style-type: none"> • Vehicle identification number • Authorising member state and vehicle registration number
5	Identification of the tachograph: <ul style="list-style-type: none"> • Tachograph manufacturer • Part number of the DTCO 1381 tachograph



6	Most recent tachograph calibration: <ul style="list-style-type: none"> • Name of workshop • Workshop identification • Date of calibration
7	Most recent control: <ul style="list-style-type: none"> • Control card identification • Date, time, and type of control <ul style="list-style-type: none"> ▣ = Downloading from the driver card ⚡ = Downloading from the DTCO 1381 ⚡ = Printing □ = Displaying
8	List of all driver activities in the order they appear: <ul style="list-style-type: none"> • Calendar day of the printout and the usage counter (number of days that the card was used.)
8a	? = Time period that the card was not inserted: <ul style="list-style-type: none"> • Manually entered activity after insertion of the driver card, with pictogram, beginning and duration.

8b	Insertion of driver card into slot (card slot 1 or card slot 2): <ul style="list-style-type: none"> • Authorising member state and vehicle registration number • Odometer reading when card inserted
8c	Activities of the driver card: <ul style="list-style-type: none"> • Beginning and duration, and driving status <ul style="list-style-type: none"> ⊞ = Crew operation
8d	Specific conditions: <ul style="list-style-type: none"> • Time of entry and pictogram, for example: ferry or train
8e	Withdrawal of driver card: <ul style="list-style-type: none"> • Odometer reading and distance travelled since most recent insertion
8f	Attention: Possible inconsistency in the data recording since this day was saved twice on the tachograph card.
8g	Activity not completed: <ul style="list-style-type: none"> • Duration of activity and daily summaries might be given incompletely when printouts are made while the driver card is inserted.

8h	The specific condition "OUT of scope" was switched on at start of the day.
9	Beginning of list of all driver activities in the DTCO 1381: <ul style="list-style-type: none"> • Calendar day of printout • Odometer readings at the times 00:00 and 23:59
10	Chronology of all activities from card slot 1
10a	Time period in which no driver card was inserted in card slot 1: <ul style="list-style-type: none"> • Odometer reading at the beginning of the time period • Set activity or activities in this time period • Odometer reading at the end of the time period and distance traveled
10b	Insertion of the driver card: <ul style="list-style-type: none"> • Last name of driver • First name of driver • Card identification • Card valid until ...


10c	<ul style="list-style-type: none"> Authorising member state and vehicle registration number of the previous vehicle Date and time card was removed from the previous vehicle
10d	<ul style="list-style-type: none"> Odometer reading when driver card inserted M = the entry was done manually
10e	<p>List of activities:</p> <ul style="list-style-type: none"> Pictogram of the activity, beginning and duration, and driving status ☐☐ = Crew operation
10f	<p>Entry of specific conditions:</p> <ul style="list-style-type: none"> Entry time and pictogram of the condition ⚓ = Ferry transfer or train transfer ☐☐T+ = Begin (Recording equipment not required) +☐☐T = End
10g	<p>Withdrawal of driver card:</p> <ul style="list-style-type: none"> Odometer reading and distance travelled
10h	<p>Chronology of all activities from card slot 2</p>

10i	<p>The specific condition "OUT of scope" was switched on at start of the day.</p>
11	<p>Daily summary</p>
11a	<p>Entered locations:</p> <ul style="list-style-type: none"> ⚓ = Beginning time with country and region (if applicable) ⚓ = Ending time with country and possibly region Vehicle odometer reading
11b	<p>Summary of times with no driver card in card slot 1:</p> <ul style="list-style-type: none"> Entered locations in chronological order (no entry in example) Total activities from card slot 1
11c	<p>Summary of times with "no driver card" in card slot 2:</p> <ul style="list-style-type: none"> Entered locations in chronological order (no entry in example) Total activities from card slot 2

11d	<p>Daily summary "Total values of activities" from the driver card:</p> <ul style="list-style-type: none"> Total driving time and distance travelled Total work and availability time Total rest time and unknown time Total time in crew activities
11e	<p>Summary of the activities, chronologically arranged by driver (cumulative for each driver for both card slots):</p> <ul style="list-style-type: none"> Last name, first name, card identification of the driver ⚓ = Beginning time with country and region (if applicable) ⚓ = Ending time with country and possibly region Activities from this driver with: Total driving time and distance travelled, total work and total availability time, total rest time, total time in crew activities.
12	<p>List of the five most recent saved events or faults on the driver card. ⇨⇨</p>

12a	List of all saved events on the driver card, arranged according to type of fault and date.
12b	List of all saved faults on the driver card, arranged according to type of fault and date.
12c	Data record of the event or fault. <i>Line 1:</i> <ul style="list-style-type: none"> Pictogram of the event or fault Date and beginning <i>Line 2:</i> <ul style="list-style-type: none"> Events subject to security breach are broken down with an additional code. <ul style="list-style-type: none"> ➔ Refer to "Data record purpose during events or faults" on page 115. Duration of the event or fault <i>Line 3:</i> <ul style="list-style-type: none"> Authorising member state and vehicle registration number of the vehicle in which the events or faults appeared.
13	List of the five most recent saved or still active events / faults in the DTCO 1381.
13a	List of all recorded or continuing events of the DTCO 1381.

13b	List of all recorded or continuing faults of the DTCO 1381.
13c	Data record of the event or fault. <i>Line 1:</i> <ul style="list-style-type: none"> Pictogram of the event or fault Coding of data record purpose. <ul style="list-style-type: none"> ➔ Refer to "Data record purpose during events or faults" on page 115. Date and beginning <i>Line 2:</i> <ul style="list-style-type: none"> Events subject to security breach are broken down with an additional code. <ul style="list-style-type: none"> ➔ Refer to "Coding for more detailed description" on page 117. Number of similar events on this day. <ul style="list-style-type: none"> ➔ Refer to "Number of similar events" on page 116. Duration of the event or fault

	<i>Line 3:</i> <ul style="list-style-type: none"> Identification of the driver card(s) (maximum of four entries) that was inserted at the beginning or at the end of the event or fault. "---" appears when no driver card is inserted.
14	Identification of the tachograph: <ul style="list-style-type: none"> Tachograph manufacturer Address of the tachograph manufacturer Part number Type approval number Series number Year of manufacture Version and date of installation of the user software
15	Identification of the sensor: <ul style="list-style-type: none"> Series number Type approval number Date of initial installation (first pairing with a DTCO 1381)
16	Calibration data



16a	<p>Listing of the calibration data (in data records):</p> <ul style="list-style-type: none"> Name and address of the workshop Workshop identification Workshop card valid until ...
16b	<ul style="list-style-type: none"> Date and purpose of the calibration: <ul style="list-style-type: none"> 1 = Activation; Recording of known calibration data at the time of activation 2 = Initial installation; first calibration data after activation of the DTCO 1381 3 = Installation after repair - replacement unit; first calibration data in current vehicle 4 = Periodic inspection; calibration data of a periodic inspection 5 = Entry of the vehicle registration number by the company 6 = switching off IMS
	<ul style="list-style-type: none"> Vehicle identification number Authorising member state and vehicle registration number Authorising member state and vehicle registration number

	<ul style="list-style-type: none"> Ⓜ = Characteristic coefficient of the vehicle k = Set constant in the DTCO 1381 for the speed adjustment l = Actual circumference of tyre Ⓜ = Tyre size > = Legally permitted maximum speed Old and new odometer reading
17	Time settings
17a	<p>Listing of all available data about time setting: (in data records)</p> <ul style="list-style-type: none"> Date and time, old Date and time, changed Name of workshop that set the time Address of workshop Workshop identification Workshop card valid until ... <p>Note: In the second data record it can be seen that the UTC time was corrected by an authorised workshop.</p>

18	<p>The most recently recorded event and the current fault:</p> <ul style="list-style-type: none"> ! = Most recent event, date, and time × = Most recent fault, date, and time
19	<p>Information on "over-speeding" control:</p> <ul style="list-style-type: none"> Date and time of the most recent control Date and time of the first instance of over-speeding since the most recent control and the number of subsequent over-speeding instances.
20	First instance of over-speeding since the most recent calibration.
20a	The five most severe instances of over-speeding of the last 365 days.
20b	The 10 most recently recorded instances of over-speeding. For each day the most severe instance of over-speeding is recorded.

20c	<p>Entries during instances of over-speeding (chronologically arranged by highest average speed):</p> <ul style="list-style-type: none"> • Date, time, and duration of over-speeding • Highest and average speed of the over-speeding instance, number of similar events on this day
20c	<ul style="list-style-type: none"> • Last name of driver • First name of driver • Card identification of the driver <p>Note: If no data record for an instance of over-speeding appears in a block, then the following appears: "→→----".</p>
21	<p>Periods with activated remote control:</p> <ul style="list-style-type: none"> • ⌚+ = Start time • +⌚ = End time <p>Note: Recording is made separately for driver 1 and driver 2. The times of both drivers are indicated on the printout, even when they are the same.</p>


22	<p>Handwritten information:</p> <ul style="list-style-type: none"> • 📍+ = Location of control • 📍 = Signature of the controller • ⌚+ = Start time • +⌚ = End time • 📍 = Signature of the driver
23	<p>Information about the cardholder of the recorded profile:</p> <ul style="list-style-type: none"> • Last name of driver • First name of driver • Card identification <p>Note: Missing information about the cardholder means: no driver card inserted in card slot 1.</p> <ul style="list-style-type: none"> • Beginning of the profile recording with date and time • End of the profile recording with date and time <p>New profiles are created:</p> <ul style="list-style-type: none"> • by inserting / withdrawing a tachograph card into / from card slot 1 • by a day change • by a correction of the UTC time • by a voltage interruption

24	<p>Recording of speed profiles:</p> <ul style="list-style-type: none"> • List of the defined speed ranges and period in this range • Range: $0 \leq v < 1$ = Vehicle stationary <p>The speed profile is divided into 16 zones. During installation, the individual ranges can be adjusted individually.</p>
25	<p>Recording of rpm profiles:</p> <ul style="list-style-type: none"> • List of the defined motor rpm ranges and period in this range • Range: $0 \leq n < 1$ = Engine off • Range: $3281 \leq n < x$ = unlimited <p>The rpm profile is divided into 16 zones. During installation, the individual ranges can be adjusted individually.</p>
26	<p>Manufacturer-specific data:</p> <ul style="list-style-type: none"> • Version number of the software upgrade module (SWUM)

27	<p>Configuration of the "independent motion signal"</p> <ul style="list-style-type: none"> • CAN: Vehicle data bus 1 or 2 • Source: Signal source; • speed = ABS / wheel = wheel speed / odometer (GPS) = GPS unit • Gain: Conversion factor for adapting the unit of measurement between "independent signal source" and sensor signal. • Factor: Factor for adaptation to the sensor signal.
28	<p>Information on the installed sensor:</p> <ul style="list-style-type: none"> • $\square K$: The installed sensor (KTAS2+) meets the requirement 161a (CR (EU) No. 1266/2009). • ?: The sensor must be checked by an authorised workshop.
29	<p>DTCO 1381 housing seal number.</p>

30	<p>Recording of the activities:</p> <ul style="list-style-type: none"> • Legend of the symbols • From the selected day on, there are profiles of the activities of the last 7 calendar days.
31	<p>Recording of the speed data on the selected day.</p>
32	<p>Recording of additional statuses, such as the use of blue lights and sirens on emergency vehicles, etc.:</p> <ul style="list-style-type: none"> • Legend of the symbols • From the selected day on, there are profiles of status inputs D1/D2 of the last 7 calendar days.
33	<p>Please note: Not a legal printout!</p> <p>A printout in local time can not be used for legal purposes and is not in accordance with the relevant Regulations (e.g. retention requirements)!</p>

34	<p>Period of the printout in local time:</p> <ul style="list-style-type: none"> • ☉+ = Start of recording • +☉ = End of recording • UTC +01h00 = Difference between UTC time and local time.
35	<p>Date and time of the printout in local time (LOC).</p>
36	<p>Type of printout e.g. "24h\square" in local time "☉".</p>

 The product and manuals still contain references to the manufacturer's previous name, 'Continental Automotive Technologies GmbH'. This does not constitute grounds for complaint, as the renaming of the manufacturer to 'AUMOVIO Germany GmbH' is a transition involving the transfer of all rights and obligations of the manufacturer.

■ Data record purpose during events or faults

For each established event or each established fault, the DTCO 1381 will register and save the data according to the specified rules.

⊗F	/12345678901234	5 6
⊗B	/22335578901234	1 2
→→	4 15.10.2017 11:10	
	(45)	00h30
⊗DK	/45678901234567	7 8
⊗F	/12345678901234	5 6

(1) Data record purpose

(2) Number of similar events on this day

The data record purpose (1) indicates why the event or fault was recorded. Events of the same type appearing several times on this day are displayed at pos. (2).

► Coding of data record purpose

The following overview shows the events and faults arranged according to error type (cause) and the assignment of the data record purpose:

Events		
Picto / reason		Purpose
!⊗⊗	Cards conflict ²⁾	0
!⊗⊗	Driving without valid card ²⁾	1 / 2 / 7
!⊗⊗	Insertion while driving	3
!⊗⊗	Card not closed	0
→→	Over-speeding ²⁾	4 / 5 / 6
!⊕	Power interruption	1 / 2 / 7
!⊗	Sensor fault	1 / 2 / 7
!⊗⊗	Motion conflict ²⁾	1 / 2
!⊗	Security breach	0
!⊗⊗	Time overlap ¹⁾	–
!⊗	Card invalid ³⁾	–

Faults		
Picto / reason		Purpose
⊗⊗	Card fault	0
⊗⊗	Internal fault	0 / 6
⊗⊗	Printer fault	0 / 6
⊗⊗	Display fault	0 / 6
⊗⊗	Download fault	0 / 6

1) This event will be saved only on the driver card.

2) This event / fault will only be saved in the DTCO 1381.

3) The DTCO 1381 will not save this event.


Overview Data record purpose

- 0 = One of the 10 most recent (or last) events or faults.
- 1 = The longest event for one of the last 10 days of occurrence.
- 2 = One of the 5 longest events over the last 365 days.
- 3 = The last event for one of the last 10 days of occurrence.
- 4 = The most serious event for one of the last 10 days of occurrence.
- 5 = One of the 5 most serious events over the last 365 days.
- 6 = The first event or fault having occurred after the last calibration.
- 7 = An active / on-going event or fault.

Number of similar events

- 0 = For this event, it is not necessary to save "Number of similar events".
- 1 = One event of this type appeared on this day.
- 2 = Two events of this type appeared on this day, but only one was saved.
- n = "n" events of this type appeared on this day, but only one was saved.

► Coding for more detailed description

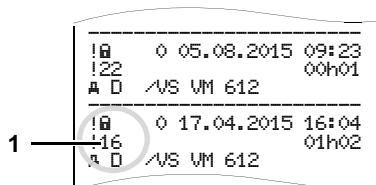

Events subject to security breach "!ID" are broken down with an additional coding (1).

Security Breach Codes relating to the DTCO 1381

- 10 = No additional information
- 11 = Failed authentication of the sensor
- 12 = Authentication errors of the driver card
- 13 = Unauthorised changes to the sensor
- 14 = Integrity error, the authenticity of the data on the driver card is not assured.
- 15 = Integrity error, the authenticity of the saved user data is not assured.

- 16 = Internal data transmission error
- 18 = Manipulation of the hardware

Security Breach Codes relating to the impulse sensor

- 20 = No additional information
- 21 = Failed authentication
- 22 = Integrity error, the authenticity of the memory data is not assured.
- 23 = Internal data transmission error
- 24 = Unauthorized opening of the casing
- 25 = Manipulation of the hardware

■ Keyword directory

A		D	
Accessories	123	Danger of explosion	9, 29, 41
Additional functions		Data download	29
Licence code	69	Data transfer	29
ADR variant	14	Download key	29
Functional deviations	16	Software	29
Symbol on the device	14	Default display	19
C		Definitions	8
Care and maintenance	93	Driver 1	8
Cleaning the DTCO 1381	93	Driver 2	8
Compulsory tachograph inspections	93	Display company	71
Repair / Replacement	93	Display instrument	75
Clear paper jam	50	Display variations	18
Company card	89	Data display when the vehicle is	
Company card insertion	27	stationary	20
Company card withdrawal	30	Default display	19
Data on the company card	91	Display after ignition on	18
Enter vehicle registration number	28	Display of messages	20
Functions of the company card	26	Ferry transfer or train transfer	21
Menu functions in the "company"		Low voltage / overvoltage	21
mode	26	Out of scope	20
Company Lock-out	30	Production status	20
Country symbols	99	Standby mode	18
Symbols of the regions	100	VDO GeoLoc *	18
		Disposal	93
		Download interface	16
		Connection to download interface ...	29
		Downloading driver card data	41
		Connection to download interface ...	41
		Data download	41
		Data transfer	41
		Download key	41
		Driver / vehicle change	44
		Documents to be kept while driving .	45
		Mixed operation	44
		Driver card	89
		Data on the driver card	91
		Inserting driver card	32
		Withdrawing driver card	42
		Driving time warnings	80
		E	
		End of paper	50
		Enter vehicle registration number	28
		Entry	65
		Enter Begin country	65
		Enter Beginning of ferry / train	67
		Enter End country	65
		Enter Out beginning / end	67
		Make UTC correction	68
		Set Local time	68

Events 76

F

Faults 78

G

General Information

 Danger of injury 9

General instructions 7

 Danger of explosion 9

 Handling the DTCO 1381 9

 Handling the tachograph cards 12

 Legal requirements 10

 Means of depiction 8

 Risk of Accident 9

I

Insert paper roll 48

L

Legal requirements 10

 Handling of the printouts 11

 Obligations of the company 11

 Obligations of the driver 10

Licence code 69

Low voltage / overvoltage 21

M

Manual entries 32

 Aborting the entry procedure 35

 Add "Rest period" activity 36

 Continuing the work shift 37

 Correction possibilities 34

 Country entry 35

 Fundamental course of action 33

 Not adding activities 33

 Prefixing activity to a shift 38

Menu functions 51

 Calling up menu functions 52

 Data access blocked 61

 Display driver 1 / driver 2 70

 Display vehicle 71

 Displaying the times of the driver

 card 53

 Entry vehicle 67

 Leaving menu functions 61

 Menu access blocked 61

 Menu entry driver 1 / driver 2 65

 Navigating in the menu functions 60

 Printout driver 1 / driver 2 62

 Printout vehicle 63

 Setting the language 53

 When the vehicle is stationary 52

Menu guidance after withdrawing driver
card 43

Menu structure 59

Messages 73

 A message appears 74

 Acknowledgement of messages 75

O

Operating modes 88

 "Company" mode 25

 Operational mode 31

Operating steps (first) 17

 For the company 17

 For the driver 17

Operational elements 14

 Card slot 1 15

 Card slot 2 16

 Cutting edge 16

 Display 15

 Download interface 15

 Menu buttons 15

 Unlock button 16

Operational notes 81

P

Pictogram combinations 97

Pictograms 96

Power interruption 21


Print activities 62

Print D1/D2 status input	64	Cancel printout	49	Workshop card	89
Print daily value from the data memory	63	Start printout	49	Technical data	94
Print daily value from the driver card ..	62	Things to note when printing	50	DTCO 1381	94
Print events from the data memory	63	R		Paper roll	94
Print events from the driver card	62	Register company	27	Time management	92
Print instances of over-speeding	63	Remote control	66	U	
Print rpm profiles	64	Risk of Accident	74	UTC time	
Print speed profiles	64	S		Converting to UTC time	92
Print technical data	63	Setting activities	39	V	
Print v-diagram	64	Automatic setting	39	VDO Counter *	54
Printout examples	101	Automatic setting after ignition on/off	39	Daily value	57
Activities from the driver card	101	Handwritten activity entries	40	Display for activity "Break time"	56
Daily printout of the vehicle	103	Manual setting	39	Display for activity "Working time" ...	56
Driver's activities	106	Setting the language	53	Displays during trip	55
Events / faults from the driver card	102	T		Layout of the VDO Counter display .	54
Events / faults from the vehicle	104	Tachograph cards	89	Status display	57
Explanations	108	Access rights of the tachograph		Weekly value	57
Over-speeding	105	cards	90	VDO GeoLoc *	18, 91
Printout in local time	107	Automatic ejection	89	Vehicle recording	69
Rpm profile	107	Cleaning tachograph cards	12		
Speed profile	107	Company card	89		
Status D1/D2 diagram	106	Control card	89		
Technical data	105	Driver card	89		
v-diagram	106	Handling the tachograph cards	12		
Printout in local time	43	Locking the tachograph cards	89		
Printout of data	49				

■ Automatic setting of the activities after ignition on/off

Automatically set activity ...		
... after ignition on		
<input type="checkbox"/>	⏸ Break time / rest period	Driver 1
<input type="checkbox"/>	⚙ Other working time	
<input checked="" type="checkbox"/>	🕒 Availability time	
<input type="checkbox"/>	– No change	
<input type="checkbox"/>	⏸ Break time / rest period	Driver 2
<input type="checkbox"/>	⚙ Other working time	
<input checked="" type="checkbox"/>	🕒 Availability time	
<input type="checkbox"/>	– No change	

... after ignition off		
<input type="checkbox"/>	⏸ Break time / rest period	Driver 1
<input type="checkbox"/>	⚙ Other working time	
<input checked="" type="checkbox"/>	🕒 Availability time	
<input type="checkbox"/>	– No change	
<input type="checkbox"/>	⏸ Break time / rest period	Driver 2
<input type="checkbox"/>	⚙ Other working time	
<input checked="" type="checkbox"/>	🕒 Availability time	
<input type="checkbox"/>	– No change	

 During the "Manual input" (addition of activities on the driver card) this option is disabled! There is no change of activity after ignition on/off!

then the previous display will appear again.

➔ *For details on the standard setting, see "Setting activities" as of page 39.*

Important!

The vehicle manufacturer may have already programmed defined settings of the activity after ignition on/off!

Please mark the set functions in the table by "✓".

Information about the DTCO 1381

Type:

No:

Year:

Setting date: _____

Signature: _____

A The automatic setting after ignition on/off is only visible in the standard display (a). The activity flashes for approx. 5 seconds,

■ Accessories

▶ DLKPro Download Key



Using the DLKPro Download Key you can download and archive the legally required data from the DTCO 1381 and Driver Card.

Order no. **A2C59515252** with card reader enabled.

▶ DLKPro TIS-Compact



Using the DLKPro TIS-Compact you can download, view and archive the legally required data from the DTCO 1381 and Driver Card.

Order Numbers:

- Europe – **A2C59515262** with card reader enabled.
- France - **A2C59516565** with card reader enabled.

▶ Remote DL 4G



Using the Remote DL 4G of VDO, you can transfer download data via GPRS to your fleet management system or an evaluation software.

- Order number: **2910002759400**

▶ Cleaning cards and cleaning cloths



The cleaning cards can be used to clean your DTCO 1381 card slots and cleaning cloths, Driver and Company cards.

Order Numbers:

- Cleaning cards – **A2C59513382** (12 cards)
- Cleaning cloths – **A2C59511849** (12 cloths)
- Cleaning cloths (set) – **A2C59511838** (6 cards / 6 cloths)

▶ VDO Link



VDO Link is an add-on module to invoke vehicle and tachograph data remotely and in real time, e.g. for telematics.

VDO Link is attached to the DTCO.

Order number: **AAA2201870110**

► VDO Online Shop

The online shop for original products and services from VDO:



www.vdoshop.co.uk

■ Declarations of conformity / Authorisations

On the following pages you will find the declaration of conformity for the EU area (CE mark) and the UK (UKCA mark) for the DTCO 1381 digital tachograph.


Under the link <https://fleet.vdo.com/support/ce-certificates/> you will find these and other declarations and approvals in several languages:

- KBA type approval (Kraftfahrt-Bundesamt = German Federal Vehicle Office)
- ATEX certificate
- CE declaration of conformity
- UKCA declaration of conformity



AUMOVIO Germany GmbH

EU Declaration of Conformity

- 1. Equipment** 1a. Smart tachograph type DTCC 1381
- 2. Manufacturer** VDO / AUMOVIO Germany GmbH
Heinrich-Hertz-Str. 45,
70652 Villingen-Schwenningen
Germany
- 3. CE Requirements** 3a. We as manufacturer hereby declare that the following described equipment when used for its intended purpose is in conformity with the relevant Union harmonization legislation: Directive No. 2014/53/EU (RED Directive) and if applicable Directive No. 2014/34/EU for equipment and protective systems for use in potentially explosive atmospheres. This declaration of conformity is issued under the sole responsibility of the manufacturer.
- 4. Variants of the Equipment** 4a. Variants with GNSS and DSRC:
DTCC 1381.xxxxx1X
DTCC 1381.xxxxx2X
DTCC 1381.xxxxx3X
4b. variants with GNSS only:
DTCC 1381.xxxxx4X
DTCC 1381.xxxxx5X
DTCC 1381.xxxxx6X
4c. variants for ADR vehicles:
DTCC 1381.2xxxxxx
DTCC 1381.3xxxxxx
DTCC 1381.4xxxxxx
DTCC 1381.7xxxxxx
- 5. EU type examination certificate** T818402F-05-TEC
5a. Only applicable for RED certification (variants 4a. and 4b.):
TUV 03 ATEX 2324 X
5b. Only applicable for ADR variants (4c.)
6. Notified body 6a. Only applicable for RED certification (variants 4a. and 4b.):
CTC advanced GmbH, Untertuerkheimer Str. 6-10,
66117 Saarbrücken, Germany, CE 0682
6b. Only applicable for EU type examination of ADR variants (4c.):
TUV NORD CERT GmbH, Geschäftsstelle Hannover, Am TÜV 1,
30519 Hannover, Germany, CE 0044
6c. Notified body of surveillance of ADR variants:
DEKRA Testing and Certification GmbH, Zertifizierungsstelle Bochum,
Dinnendahlstraße 9, 44809 Bochum CE 0158
- 7. Marking of the equipment** 7a. Only applicable for ADR variants (4c.):
 II 3(2)5 Ex ec [ib Gb] IIC T6 Gc
- 8. Used harmonized standards** 8a. Only applicable for RED certification (variants 4a. and 4b.):

1/2

AUMOVIO Germany GmbH | Geschäftsbereich 7 | BSHF Finkenluis am Meer | Germany
 Registered Office: Hannover | Registered Court: Hannover | HRB 2658 | VAT: DE244427056
 Managing Director: Nico Wenzel | Director: Frankfort | Dr. Andreas Löffel | Harald Schwaninger
 Bank details: Deutsche Bank Finkenluis am Meer | BIC: 2507 0010 | IBAN: 8975 00 | BIC: DEUT33HAN



EN 300 328 V2.2.2, EN 300 674-2-2 V2.1.1, EN 303 413 V1.2.1
 EN 301 489-1 V2.2.3, EN 301 489-3 V2.3.0 (Draft), EN 301 489-17
 V3.2.5 (Draft), EN 301 489-19 V2.2.1
 EN 62368-1: 2014/AC, 2015/A11: 2017/AC:2017
 EN 62479:2010

8b. Only applicable for ADR variants (4c.);

EN IEC 60079-0:2018;
 EN IEC 60079-7:2015/A1;
 EN 60079-11:2012

9. Other used directives and regulations
 VO (EU) Nr. 165/2014, VO (EU) 2016/798, VO (EU) 2018/602, ECE
 R10 Rev. 06/02

10. This declaration certifies the conformity to the specified directives but does not imply any warranty for properties. The safety documentation accompanying the product shall be considered in detail.

Villingen-Schwenningen, December 18, 2025
 AUMOVIO Germany GmbH

Pierre Blüher
 Pierre Blüher
 Geschäftsführer
 c/o AUMOVIO GmbH
 Industriestraße 12
 71032 Villingen-Schwenningen
 07141 205 13 18 20 29

Pierre Blüher
 Head of Homologation

Ulrich Bothe
 Ulrich Bothe
 Geschäftsführer
 c/o AUMOVIO GmbH
 Industriestraße 12
 71032 Villingen-Schwenningen
 07141 205 13 18 20 29

Ulrich Bothe
 Head of Quality



<https://www.fleet.vdo.com/support/ce-certificates/>

AUMOVIO Germany GmbH | Gewissstraße 7 | 60468 Frankfurt am Main | Germany
 Telephone: +49 69 70020 | www.aumovio.com
 VAT No.: DE241447868
 Deputy Chairperson of the Supervisory Board: Sören Nöcker
 Chairperson of the Supervisory Board: Sören Nöcker
 Bank for legal entities: Deutsche Bank Frankfurt am Main | IBAN: DE25 2507 0010 0406 8873 00 | BIC: DEUTDE33XXX



DOC Translation Annex

Legend:

Language Code (ISO 639-1)	Language name		Applicable Country
	(in English)	in local language (endonym)	
EN	English	English	Ireland, Malta, United Kingdom
DE	German	Deutsch	Austria, Belgium, Luxembourg, Germany, Switzerland
BG	Bulgarian	български език	Bulgaria
ET	Estonian	Eesti keel	Estonia
FI	Finnish	suomen kieli	Finland
EL	Greek	Νέα Ελληνικά	Cyprus, Greece
ES	Spanish; Castilian	español; castellano	Spain
FR	French	français	Belgium, Luxembourg, France, Switzerland
HU	Hungarian	magyar nyelv	Hungary
IT	Italian	italiano; lingua italiana	Italy
HR	Croatian	hrvatski	Croatia
LT	Lithuanian	lietuvių kalba	Lithuania
LV	Lithuanian	latviešu valoda	Latvia
NL	Dutch; Flemish	Nederlands; Vlaams	Belgium, Netherlands
PL	Polish	Język polski	Poland
PT	Portuguese	português	Portugal
RO	Romanian; Moldavian; Moldovan	limba română	Romania
SV	Swedish	svenska	Finland, Sweden
SK	Slovak	slovenčina; slovenský jazyk	Slovakia
SL	Slovenian	slovenski jezik; slovensčina	Slovenia
CS	Czech	česčina; český jazyk	Czech Republic
IS	Icelandic	íslenska	Iceland
TR	Turkish	Türkçe	Cyprus, Turkey
SR	Serbian	српски, српски	Serbia
SQ	Albanian	Shqip	Albania
MK	Macedonian	македонски јазик	North Macedonia
BS	Bosnian	bosanski; bosanac	Bosnia and Herzegovina

Translation:

1.	(EN) EU Declaration of Conformity, (DE) EU-Konformitätserklärung, (BG) EC Декларация за съответствие, (ET) EU vastavõtteatsetatsioon, (FI) EU:n vaatimustenmukaisuusvakuutus, (EL) Δήλωση συμμόρφωσης, (EE) (ES) Declaración de conformidad CE, (FR) Déclaration de conformité CE, (HU) EU-konformitási nyilatkozás, (IT) Dichiarazione di conformità CE, (PL) EU zgodności oświadczenie, (PT) Declaração de conformidade UE, (SV) EU-förklaration om överensstämmelse, (SK) ES vyhlášení o zhode, (SL) EU izjava EU o skladnosti, (CS) EU prohlášení o shodě, (IS) Samræmiðsýðing ESB, (TR) AB Uygunluk Beyanı, (SR) EU Deklaracija o yuznacenošću, (SQ) Deklarata e konformitetit të BE-së, (MK) Декларација за yuznacenošć na EY, (BS) EU Deklaracija o uskladenosti
1a.	(EN) Equipment, (DE) Gerät, (BG) Оборудване, (ET) Seadmed, (FI) Laitteet, (EL) Συσκευή, (ES) Aparato, (FR) Appareil, (HU) Berendezések, (IT) Apparecchio, (HR) Oprema, (LT) Priedasas, (LV) Ierīce, (NL) Apparaat, (PL) Urządzenie, (PT) Aparelho, (RO) Aparat, (SV) Utrustning, (SK) Zariadenie, (SL) Naprava, (CS) Zařízení, (IS) Búnaður, (TR) Ekipman, (SR) Oprema, (SQ) Pajëje, (MK) Oprema, (BS) Oprema
1a.	(EN) Smart tachograph type DTCCO 1381; (DE) Intelligenter Fahrschreiber Typ DTCCO 1381; (BG) Интелигентен тахограф тип DTCCO 1381; (ET) Nutiteograafid tüüp DTCCO 1381; (FI) Älykäs ajuritieturi tyyppi DTCCO 1381; (EL) Εξυμνοχ ταχογράφος τύπου DTCCO 1381; (FR) Appareil intelligent de type DTCCO 1381; (HU) Intelligens táchográf típusú DTCCO 1381; (PL) Inteligentny tachograf typu DTCCO 1381; (PT) Programável tachógrafo, tipo DTCCO 1381; (IT) Intelligentes tachografo, tipo DTCCO 1381; (NL) Intelligente tachograf type Programabilis

AUMOVIO Germany GmbH | Courtenastraße 7 | 60488 Frankfurt am Main | Germany
 Telephone: +49 (0) 3003-5 | www.aumovio.com
 E-mail: aumovio@aumovio.com | aumovio@aumovio.com | aumovio@aumovio.com
 Deputy Chairman of the Supervisory Board: Sören Nitzsche
 Chairman of the Supervisory Board: Sören Nitzsche
 Bank details: Deutsche Bank Frankfurt am Main | IBAN: DE24 5007 0010 0008 8873 00 | BIC: DEUT33HAN

1/5



<p>5.</p>	<p>(HU) ADR járművek változatai; (IT) Varianti ADR (HR) varijante za ADR vozila; (LT) ADR variantai; (LV) ADR versijas; (NL) ADR-varianten; (PL) Warianty ADR; (PT) Variantes ADR; (RO) Variante ADR; (SV) varianter för ADR-fordon; (SK) Varianty ADR; (SL) Realizacije ADR; (CS) varianty pro vozidla ADR; (IS) aðferð fyrir ADR ökutæki; (TR) ADR açıkları için varyantlar; (SR) Izopretnosti za ADR vozila; (EN) ADR variant for autopower ADR; (MK) Izopretnosti za ADR vozila; (BS) varijante za ADR vozila</p> <p>(EN) EU type examination certificate; (DE) EU-Baumusterprüfbescheinigung; (BG) одобрение за ЕС изпитаване на типа; (ET) ELI tüübideklaratsioon; (FI) EU-tyyppitarkastustodistus; (EL) Πρωτόκολλο εξομολόγησης τύπου ΕΕ; (ES) Certificación de conformidad de camiónes modelo UE; (FR) Attestation d'examen de type UE; (HU) EU-típusvizsgálati tanúsítvány; (IT) Attestato di certificazione del campione UE; (IR) ADR potvrdilo o ispravnosti tipa; (LT) ES tipo tyrimo sertifikatas; (LV) ES tipa pārbaudes sertifikāts; (NL) Verklaring van EG-typetoetsing; (PL) Certyfikat badania typu UE; (PT) Certificação de exame de tipo de UE; (RO) Certificatul de examinare UE de tip; (SV) ADR-variant för fordon; (SK) Varianty ADR; (IS) aðferð fyrir ADR ökutæki; (SR) Izopretnosti za ADR vozila; (SL) Izopretnosti za ADR vozila; (CS) Varianty pro vozidla ADR; (IS) aðferð fyrir ADR ökutæki; (TR) ADR açıkları için varyantlar; (SR) Izopretnosti za ADR vozila; (MK) Izopretnosti za ADR vozila; (BS) varijante za ADR vozila</p> <p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p> <p>(EN) Notified body; (DE) Benannte Stelle; (BG) нотифициран орган; (ET) teavitatud asutus; (FI) ilmoitettu laitos; (EL) Ανουκτωμένο, ορισμένο; (ES) Organismo notificado; (FR) Organisme notifié; (HU) Bejelentett szervezet; (IT) Organismo notificato; (IR) Pajvayefno tijelo; (LT) Notifikuojis tijelis; (LV) Paziņotā institūcija; (NL) Erkende instantie; (PL) Jednostka notyfikowana; (PT) Organismo notificado; (RO) Organismu notificat; (SV) Armtat organ; (SK) Menované miesto; (SL) Preglašeni organ; (CS) Oznámený úřad; (IS) Tilkynnt aðili; (TR) Onaylanmış kuruluş; (SR) notifikovano mesto; (SQ) Organi i njohur; (MK) Obaveštavaju telo; (BS) Prijavljeno tijelo</p> <p>(EN) EU type approval; (DE) für EU-Baumusterprüfung; (BG) за ЕС изпитаване на типа; (ET) EU tüübideklaratsioon; (FI) EU-tyyppitarkastus; (EL) Έγκριση τύπου; (ES) Aprobación de tipo; (FR) homologation de type; (HU) EU-típusjóváírás; (IT) Omologazione del tipo; (IR) ADR potvrdilo o ispravnosti tipa; (LT) ES tipo tyrimas; (LV) ES tipa pārbaude; (NL) de EU-typeroelvering; (PL) badanie i zatwierdzenie typu UE; (PT) o exame UE de tipo; (RO) o examinare UE de tip; (SV) för EU-typkontroll; (SK) EU skúšky typu; (SL) EU pregled tipa; (CS) EU-akozování typu; (IS) ESB gerðingartölur; (TR) AB tip incelemeisi; (SR) ispitavanje tipa EU; (SQ) të provimit të tipit të BE-së; (MK) ispitavanje tipa EU; (BS) EU ispitavanje tipa</p> <p>(EN) of surveillance; (DE) der Überwachung; (BG) за изпитаване; (FI) valvonta; (EL) ηκς επιτήρησης; (ES) de vigilancia; (FR) la surveillance; (HU) a felügyelet; (IT) di sorveglianza; (HU) nadzore; (LT) vykdoma priežiūra; (LV) uzraudzība; (NL) de toezicht; (PL) nadzór; (PT) da fiscalização; (RO) de supraveghere; (SV) för övervakning; (SK) dohľad; (SL) nadzor; (CS) dozor; (IS) af eftirlit; (TR) gözetim; (SR) nadzora; (SQ) i mbyqerjes; (MK) na nadzor; (BS) nadzora</p> <p>(EN) Marking of the equipment; (DE) Gerätebezeichnung; (BG) маркировка на обогатяването; (ET) Seadmete märgistus; (FI) Laitteen merkintä; (EL) Σήμανση ουσίας; (ES) Identificación del aparato; (FR) Identification des appareils; (HU) A berendezés megjelölése; (IT) Designazione dell'apparato; (IR) Oznaka aparata; (LT) Įrenginio žymėjimas; (LV) Ierīču marķējums; (NL) Markering van de apparatuur; (PL) Oznaczenie urządzenia; (PT) Identificação do aparelho; (RO) Marcajul aparatului; (SV) Märkning av utrustningen; (SK) Označenie prístroja; (SL) Označba naprave; (IS) Skilríki áhlíf; (TR) Ekipmanın işaretlemesi; (SR) Obeležavanje opreme; (SQ) Shënimi i pajisjeve; (MK) Obeležavanje na oprematu; (BS) Označavanje opreme</p> <p>(EN) Used harmonized standards; (DE) Verwendete harmonisierte Normen; (BG) Използваните хармонизирани стандарти; (ET) Tubiühendus kasutatud standardid; (FI) Käytetyt yhdenmukaistetut standardit; (EL) Εποχουόχρησ υποπονογυρωτά πρότυπα; (ES) Normas armonizadas que se han aplicado; (FR) Normes harmonisées appliquées; (HU) Használt harmonizált szabványok; (IT) Norme armonizzate applicate; (HR) Koristiše usklađene norme; (LT) Taisyti diramieji standartai; (LV) Izmantoti harmonizācija standarti; (NL) Gebruikte geharmoniseerde normen; (PL) Zastosowane normy zharmonizowane; (PT) Normas harmonizadas aplicadas; (RO) Standartele armonizate aplicate; (SV) Använda harmoniserade standarder; (SK) Použité harmonizačné normy; (SL) Uporabljene harmonizirane standarde; (IS) Notaðar samræmðar</p>
<p>5a</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>
<p>6a.</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>
<p>7a.</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>
<p>8a.</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>
<p>5b.</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>
<p>6b.</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>
<p>7b.</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>
<p>8b.</p>	<p>(EN) Only applicable for ADR variants; (DE) Nur anwendbar für ADR Varianten; (BG) Протоколът като за съответен ADR; (ET) Kvalifikatsioon ainult ADR-variantide puhul; (FI) Sovittelään vain ADR-varianttien; (EL) Τύπος μόνο για ημιαυτόματα ADR-variantes; (ES) Aplicable sólo para autorizaciones de homologación de variantes ADR; (FR) Uniquement applicable pour l'homologation radio des variantes répondant à la directive RED; (HU) Csak RED-variantekre érvényes a homologációs eljárás; (IT) Applicabile solo per l'autorizzazione radio delle varianti RED; (IR) Primitivno samo za RED certifikate; (LT) Tiekamas tik ADR variantams; (LV) Pielietams tikai ADR variantiem; (NL) Toepassbaar voor ADR-varianten; (PL) Dotyczy tylko ADR-variantów; (PT) Aplicável apenas para variantes ADR; (RO) Se aplică numai pentru variantele ADR; (SV) Endast tillåtet för ADR-varianter; (SK) Môže použiť iba pre varianty ADR; (SL) Uporablja se samo za različice ADR; (CS) Platí pouze pro varianty ADR; (IS) Gildir aðeins fyrir ADR; (TR) Sadece ADR varyantları için geçerlidir; (SR) Primenljivo samo za ADR varijante; (SQ) E s'pëllueshme vetëm për variantet ADR; (MK) Primenljivo samo za ADR varijante</p>

4/5

AUMOVIO GmbH (EORI-Nr. DE274110234) | Unternehmensstr. 7 | 90468 Frankfurt am Main | Germany
 Registered Office: Hannover | Registered Court: Hannover | HRB 3969 | VAT: DE331447006
 Managing Director: Nicola Vermetti | Tax ID: 274110234 | Managing Director: Dr. Andreas Lutz | Head of Business
 Sales Office: Deutsche Bank | Frankfurt am Main | IBAN: DE33 2500 0010 0006 0010 00 | BIC: BFSW33HAN



AUMOVIO Germany GmbH

UK Declaration of Conformity

We as manufacturer hereby declare that the following described equipment when used for its intended purpose is in conformity with the relevant United Kingdom Regulations: Radio Equipment Regulations 2017 (SI 2017 No. 1206, as amended) and if applicable: Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016 (UKSI 2016 No. 1107). This declaration of conformity is issued under the sole responsibility of the manufacturer.

Manufacturer

VDO / AUMOVIO Germany GmbH
Heinrich-Hertz-Str. 45,
78052 Villingen-Schwenningen,
Germany

Equipment

Smart tachograph type DTCCO 1381 that is equipped with Global Navigation Satellite System (GNSS) and Dedicated Short Range Communication (DSRC) or that is intended for use in vehicles for the transport of dangerous goods by road (ADR vehicles).

Variants of the equipment

variants without GNSS and DSRC (no RED):

DTCCO 1381.xxxxx0x
variants with GNSS and DSRC (RED):
DTCCO 1381.xxxxx1x
DTCCO 1381.xxxxx2x
DTCCO 1381.xxxxx3x

variants with GNSS only (RED):

DTCCO 1381.xxxxx4x
DTCCO 1381.xxxxx5x
DTCCO 1381.xxxxx6x

variants for ADR vehicles (ATEX/UKEX):

DTCCO 1381.2xxxxxx
DTCCO 1381.3xxxxxx
DTCCO 1381.4xxxxxx
DTCCO 1381.7xxxxxx

Type examination certificate

Only applicable for variants with GNSS or DSRC:
(EU) RED Type Examination: T818402F-05-TEC

Notified body

Only applicable for ADR variants:
ATEX Certificate: TÜV03ATEX2324X
UKEX Type Certificate EMA21UKEX0029X
Only applicable for (EU) RED certification:
CTC advanced GmbH, Untertuerkheimer Str. 6-10,
66117 Saarbrücken, Germany, CC 0682

Only applicable for ADR variants:

Notified body for UK type examination:
Element Materials Technology, Unit 1, Pendle Place,
Skelmersdale, West Lancashire, WN8 9PN, United Kingdom,
GB 0891

Notified body of surveillance of ADR variants (Fast-Track UKCA

AUMOVIO, VDO, DTCCO | Eisenstraße 2 | 60488 Frankfurt am Main | Germany
Telephone: +49 69 762033 | www.aumovio.com
E-mail: aumovio@vdo.com | aumovio@vdo.com | aumovio@vdo.com
Display the contents of the | Regulatory Code: 536, N244
Display the contents of the | Regulatory Code: 536, N244
Manufacturing locations: Hesse, France | Eisenstraße 2 | 60488 Frankfurt am Main | Germany
Manufacturing locations: Hesse, France | Eisenstraße 2 | 60488 Frankfurt am Main | Germany
CE 0891



Process:
DEKRA Testing and Certification GmbH, Zertifizierungsstelle
 Bochum, Dimmendahlstraße 9, 44809 Bochum CE 0158

Marking of the equipment

Only applicable for ADR variants:

II 3 (2) G Ex ec [Ib Gb] IIC T6 Gc

Used standards

Applicable for the above mentioned variants according Radio
 Equipment Regulations 2017 (SI 2017 No. 1206, as amended):
 EN 300 328 V2.2.2, EN 300 674-2-2 V2.1.1, EN 303 413 V1.2.1
 EN 301 489-1 V2.2.3, EN 301 489-3 V2.3.0 (Draft), EN 301 489-
 17 V3.2.5 (Draft), EN 301 489-19 V2.2.1
 EN 62368-1:2014/AC:2015/A11:2017/AC:2017
 EN 62479:2010

Applicable for the above mentioned ADR variants according
 Potentially Explosive Atmospheres Regulations 2016 (UKSI
 2016 No. 1107):

EN IEC 60079-0:2018;
 EN IEC 60079-7:2015/A1:2018;
 EN 60079-11:2012

Other used directives and regulations

Regulation (EU) No. 165/2014, Regulation (EU) 2016/759, ECE
 R10 Rev. 06/02

Villingen-Schwenningen, December 18, 2025
 AUMOVIO Germany GmbH

Power Blüben
 Head of Production

Ulrich Rohw
 Head of Quality

Original signed and stamped declaration of conformity
 EN 300 328 V2.2.2, EN 300 674-2-2 V2.1.1, EN 303 413 V1.2.1,
 EN 301 489-1 V2.2.3, EN 301 489-3 V2.3.0 (Draft), EN 301 489-
 17 V3.2.5 (Draft), EN 301 489-19 V2.2.1
 EN 62368-1:2014/AC:2015/A11:2017/AC:2017
 EN 62479:2010

This declaration certifies the conformity of the goods/ services and regulates that does not imply any warranty for products. The only document(s) accompanying the product shall be contained in detail.



https://www.heat_vdo.com/support/ce-certificates/

3/2

AUMOVIO | Germany GmbH | Götterstraße 3 | 74849 Weiskirchen (Germany)
 Telefon +49 (0) 7033 31 1000 | www.aumovio.com
 Geschäftsbereich: AUMOVIO | Geschäftsbereich: AUMOVIO
 Geschäftsbereich: AUMOVIO | Geschäftsbereich: AUMOVIO
 Geschäftsbereich: AUMOVIO | Geschäftsbereich: AUMOVIO
 Geschäftsbereich: AUMOVIO | Geschäftsbereich: AUMOVIO

AUMOVIO Germany GmbH
P.O. Box 1640
78006 Villingen-Schwenningen
Germany
www.fleet.vdo.com

A2C13873300 29
70194234 SPE 000 AB
BA00.1381.30 100 102
Language: English

Version 030b | © 2026-02 | AUMOVIO Germany GmbH

